

4. Muffler


A: REMOVAL

1) Separate the muffler from rear exhaust pipe.


CAUTION:

Be careful, exhaust pipe is hot.

- LH side

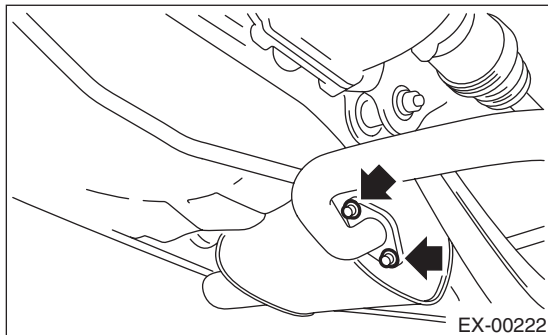


- RH side

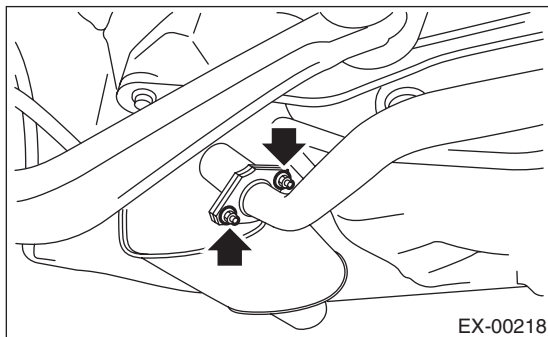


2) Apply a coat of spray type lubricant to the mating area of cushion rubber.

- LH side

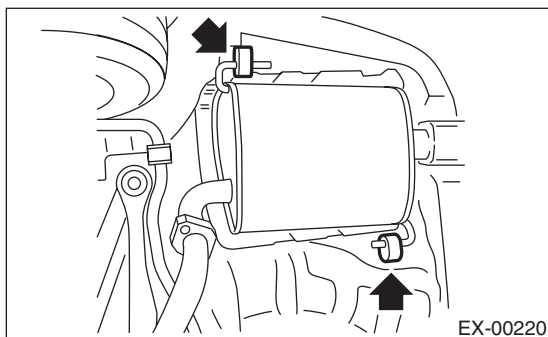

- RH side

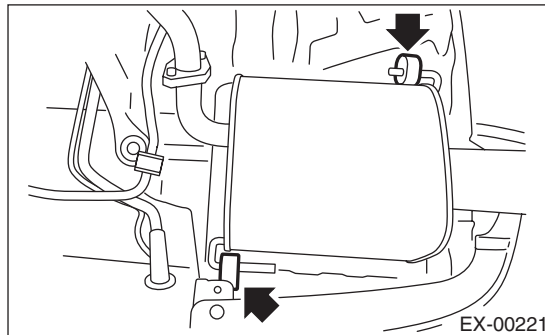

3) Remove the front and rear cushion rubber, and then remove the muffler.

B: INSTALLATION

Install in the reverse order of removal.


NOTE:

Use a new gasket and self-locking nut.


Tightening torque:

48 N·m (4.9 kgf·m, 35.4 ft·lb)

- LH side

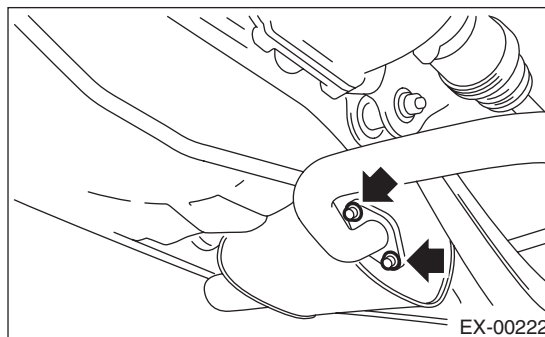

- RH side

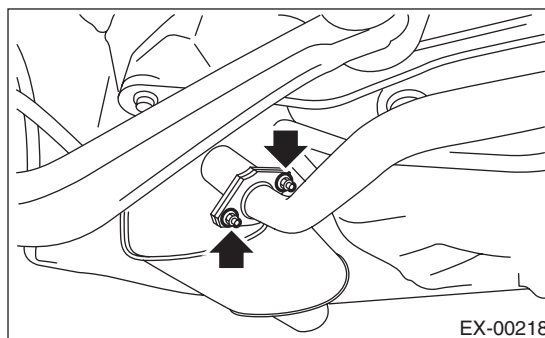

C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Make sure there are no holes or rusting.
- 3) Check the cushion rubber for wear or crack.

Muffler

EXHAUST

COOLING

CO(H6DO)

	Page
1. General Description	2
2. Radiator Fan System	7
3. Engine Coolant	10
4. Water Pump	12
5. Thermostat	13
6. Radiator	14
7. Radiator Cap	17
8. Radiator Main Fan and Fan Motor	18
9. Radiator Sub Fan and Fan Motor	21
10. Reservoir Tank	23
11. Radiator Fan Control Unit	24
12. Engine Cooling System Trouble in General	25