


15. Rear Oxygen Sensor


A: REMOVAL

- 1) Set the vehicle on a lift.
- 2) Disconnect the ground cable from battery.

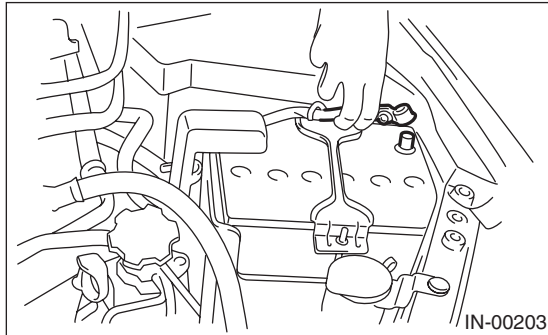


- 3) Lift-up the vehicle.
- 4) Disconnect the connector from rear oxygen sensor.

- LH side

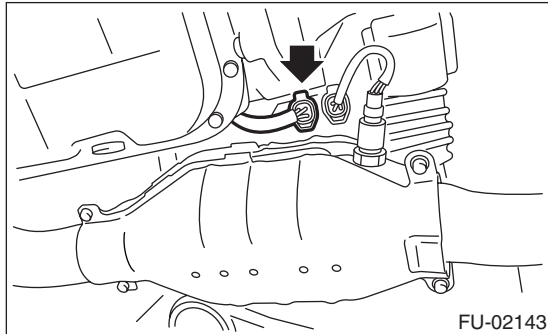

- RH side

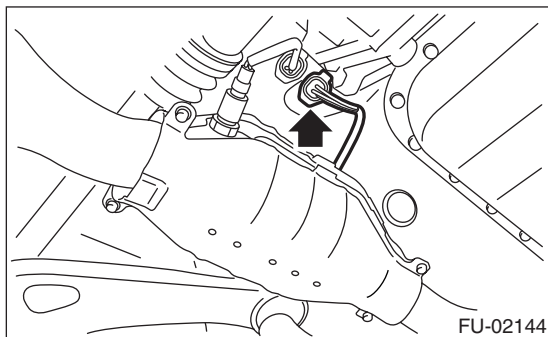

- 5) Remove the clip holding the harness.

- 6) Remove the rear oxygen sensor.


NOTE:

If it is hard to remove the oxygen (A/F) sensor, apply spray type lubricant and leave it for one minute or more.


CAUTION:

When removing the rear oxygen sensor, wait until exhaust pipe cools, otherwise it will damage the exhaust pipe.

- LH side

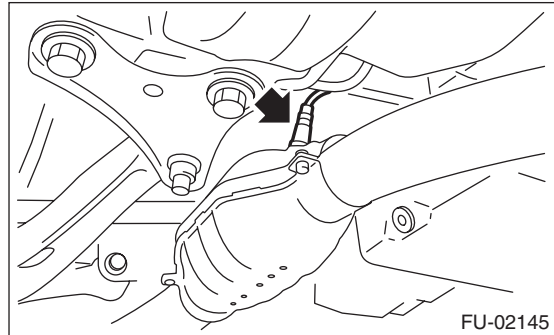

- RH side

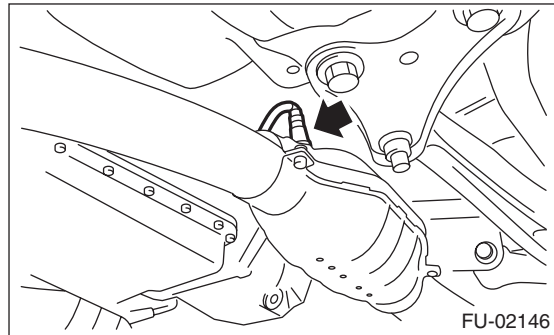

Rear Oxygen Sensor

FUEL INJECTION (FUEL SYSTEMS)

B: INSTALLATION

1) Before installing rear oxygen sensor, apply the anti-seize compound only to the threaded portion of rear oxygen sensor to make the next removal easier.

Anti-seize compound:

NEVER-SEEZ NS-165 or the equivalent

CAUTION:


Never apply anti-seize compound to the protector of rear oxygen sensor.

2) Install the rear oxygen sensor.


Tightening torque:

21 N·m (2.1 kgf-m, 15.2 ft-lb)

- LH side

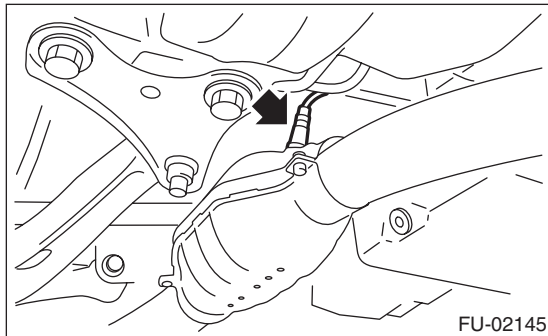


- RH side

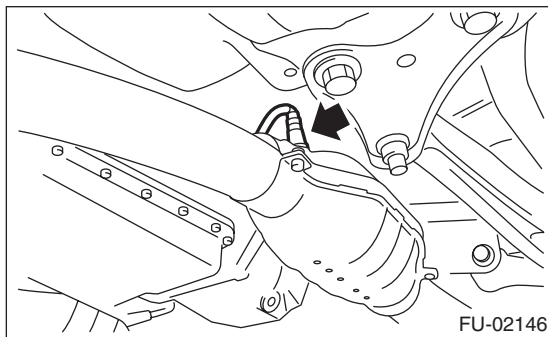


3) Hold the harness with clip.

4) Connect the connector to rear oxygen sensor.

- LH side

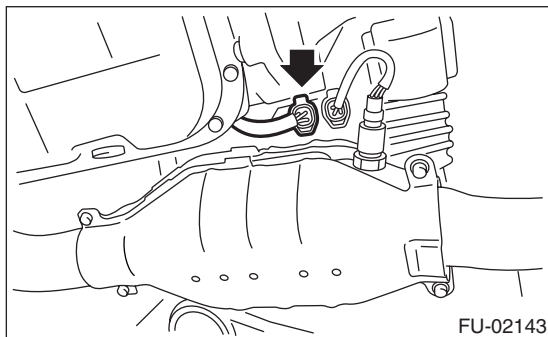

- RH side

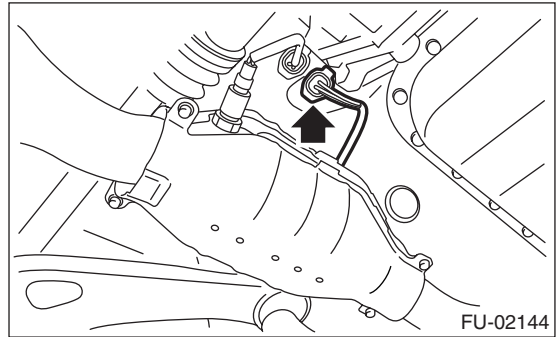

5) Lower the vehicle.

6) Connect the battery ground cable to the battery.

