



## 2. Throttle Body

### A: REMOVAL


- 1) Remove the collector cover.
- 2) Disconnect the ground cable from battery.

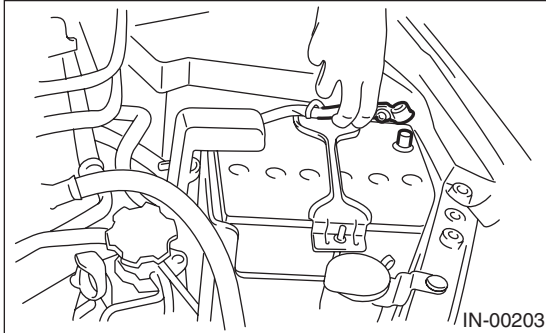

- 3) Remove the air intake chamber. <Ref. to IN(H6DO)-7, REMOVAL, Air Intake Chamber.>
- 4) Disconnect the connectors from the throttle position sensor.

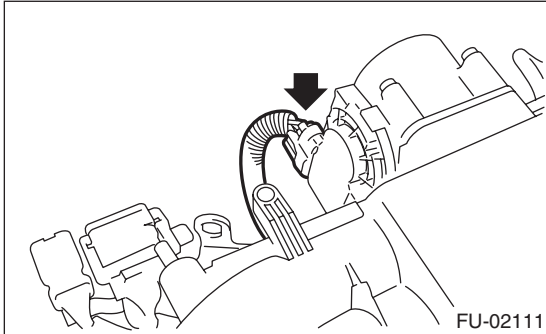

- 5) Disconnect the engine coolant hoses (A) from throttle body.
- 6) Remove the bolts (B) which secure throttle body to intake manifold.

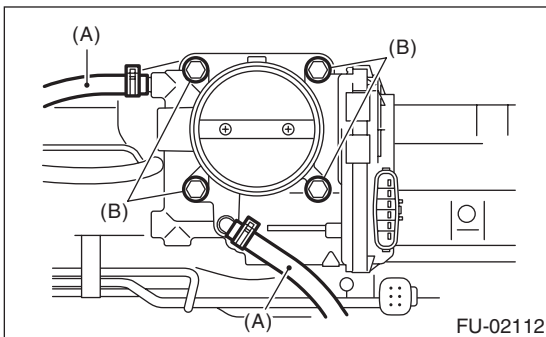

### B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Use new O-rings.

**Tightening torque:**

**8 N·m (0.8 kgf·m, 5.9 ft·lb)**