


28. Fuel Bypass Valve

A: REMOVAL

- 1) Release the fuel pressure. <Ref. to FU(H6DO)-38, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>
- 2) Disconnect the pressure regulator vacuum hose.
- 3) Disconnect the fuel delivery line and return line from the fuel by-pass valve.
- 4) Remove the fuel by-pass valve from the vehicle.
- 5) Disconnect the fuel delivery hose and fuel return hose from the fuel by-pass valve.

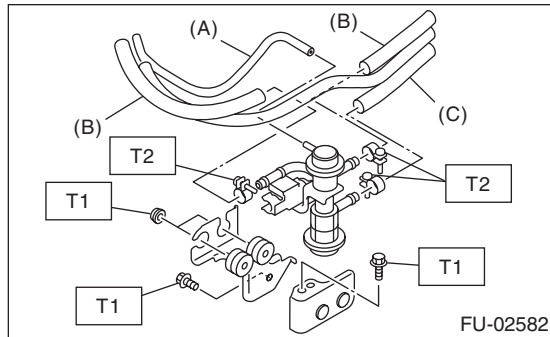

- (A) Pressure regulator vacuum hose
- (B) Fuel delivery line
- (C) Fuel return line

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

T1: 7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

T2: 1.25 N·m (0.13 kgf-m, 0.94 ft-lb)