

# Throttle Position Sensor

FUEL INJECTION (FUEL SYSTEMS)

---

## 8. Throttle Position Sensor

### A: SPECIFICATION

Throttle body is a non-disassembled part, so do not remove the throttle position sensor from throttle body.

Refer to “Throttle Body” for removal and installation procedure. <Ref. to FU(H6DO)-11, REMOVAL, Throttle Body.> <Ref. to FU(H6DO)-11, INSTALLATION, Throttle Body.>