


Air Intake Duct

INTAKE (INDUCTION)

5. Air Intake Duct

A: REMOVAL

- 1) Remove the clip which installs the air intake duct on the front side of body.
- 2) Remove the air intake duct.

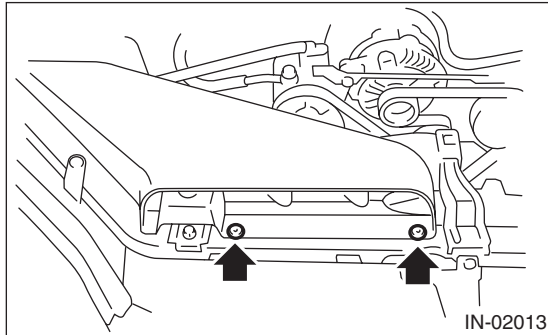

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Check for cracks or loose connections.
- 2) Check that no foreign matter is mixed in air intake duct.