

## 6. Resonator Chamber

### A: REMOVAL

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to “Air Cleaner Case” for removal procedure. <Ref. to IN(H6DO)-5, REMOVAL, Air Cleaner Case.>

### B: INSTALLATION

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to “Air Cleaner Case” for installation procedure. <Ref. to IN(H6DO)-6, INSTALLATION, Air Cleaner Case.>

### C: INSPECTION

Check for cracks or loose connections.

# Resonator Chamber

INTAKE (INDUCTION)

---

IN(H6DO)-10

# MECHANICAL

# *ME(H6DO)*

---

	<b>Page</b>
1. General Description .....	2
2. Compression .....	21
3. Idle Speed .....	22
4. Ignition Timing .....	23
5. Intake Manifold Vacuum .....	24
6. Engine Oil Pressure .....	25
7. Fuel Pressure .....	26
8. Valve Clearance .....	27
9. V-belt .....	32
10. Engine Assembly .....	33
11. Engine Mounting .....	39
12. Preparation for Overhaul .....	40
13. Crank Pulley .....	41
14. Front Chain Cover .....	42
15. Timing Chain Assembly .....	44
16. Cam Sprocket .....	49
17. Crank Sprocket .....	50
18. Rear Chain Cover .....	51
19. Camshaft .....	53
20. Cylinder Head .....	57
21. Cylinder Block .....	62
22. Oil Flow Control Solenoid Valve .....	77
23. Oil Switching Solenoid Valve .....	78
24. Intake and Exhaust Valve .....	79
25. Piston .....	80
26. Connecting Rod .....	81
27. Crankshaft .....	82
28. Engine Trouble in General .....	83
29. Engine Noise .....	90