



8. Engine Oil Filter

A: REMOVAL

- 1) Lift-up the vehicle.
- 2) Drain the engine oil by removing the engine oil drain plug.

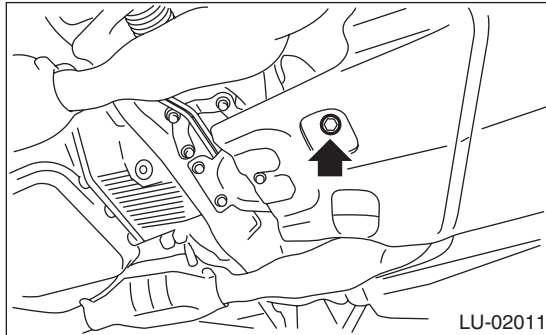

- 3) Remove the under cover.
 - 4) Remove the oil filter using the ST.
- ST 4985447000 OIL FILTER WRENCH

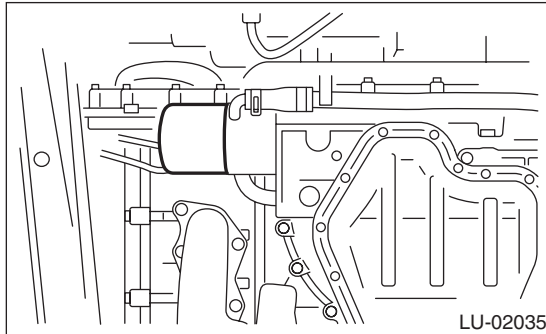

B: INSTALLATION

- 1) Clean the oil filter installing surface of oil cooler.
- 2) Obtain a new oil filter and apply a thin coat of engine oil to the seal rubber.
- 3) Install the oil filter turning it by hand, being careful not to damage the seal rubber.
- 4) Tighten more (approx. 3/4 turn) after the seal rubber contacts the oil cooler. Do not tighten excessively, or oil may leak.

Tightening torque:

14 N·m (1.4 kgf·m, 10.3 ft·lb)

- 5) Install the under cover.
- 6) Lower the vehicle.
- 7) Refill the engine oil. <Ref. to LU(H6DO)-7, INSPECTION, Engine Oil.>

C: INSPECTION

- 1) After installing the oil filter, run the engine and make sure that no oil is leaking around seal rubber.

NOTE:

The filter element and filter case are permanently jointed; therefore, interior cleaning is not necessary.

- 2) Check the engine oil level. <Ref. to LU(H6DO)-7, INSPECTION, Engine Oil.>