

# Front Chain Cover

MECHANICAL


## 14. Front Chain Cover

### A: REMOVAL

- 1) Remove the crank pulley. <Ref. to ME(H6DO)-41, REMOVAL, Crank Pulley.>
- 2) Remove the front chain cover.

NOTE:

Chain cover installation bolt has three different sizes. To prevent the confusion in installation, keep these bolts on container individually.

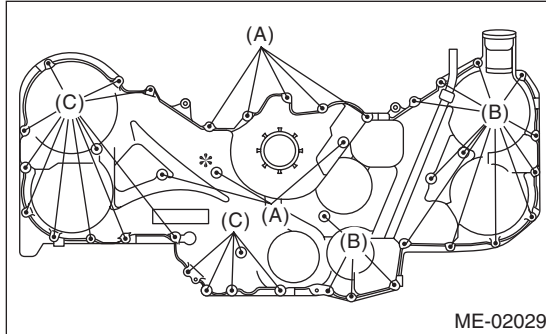

- (A) M6 × 16
- (B) M6 × 30
- (C) M6 × 45
- \*: Sealing washer

### B: INSTALLATION


- 1) Remove the used liquid gasket from mating surface, and degrease it.
- 2) Apply liquid gasket to the mating surface of front chain cover.

**Liquid gasket**

**THREE BOND 1280B (Part No. K0877YA018)**

**Applying liquid gasket diameter**


**2.5±0.5 mm (0.098±0.020 in)**

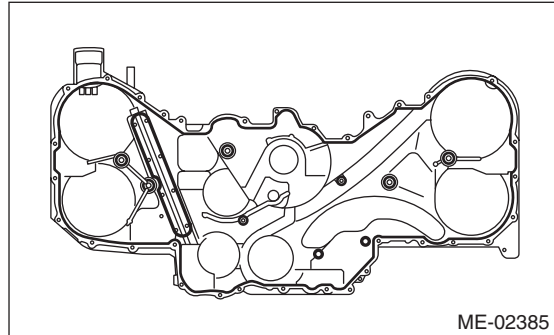

- 3) Install the front chain cover. Temporarily tighten the bolts.

**CAUTION:**

**Do not install the bolts in wrong place.**

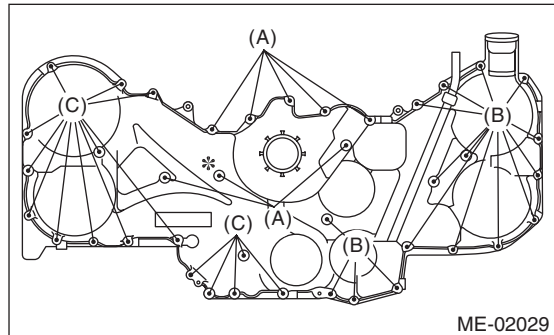


- (A) M6 × 16
- (B) M6 × 30
- (C) M6 × 45
- \*: Sealing washer

4) Tighten the bolts in the numerical order as shown in the figure.

**Tightening torque:**

**6.6 N·m (0.67 kgf·m, 4.8 ft·lb)**

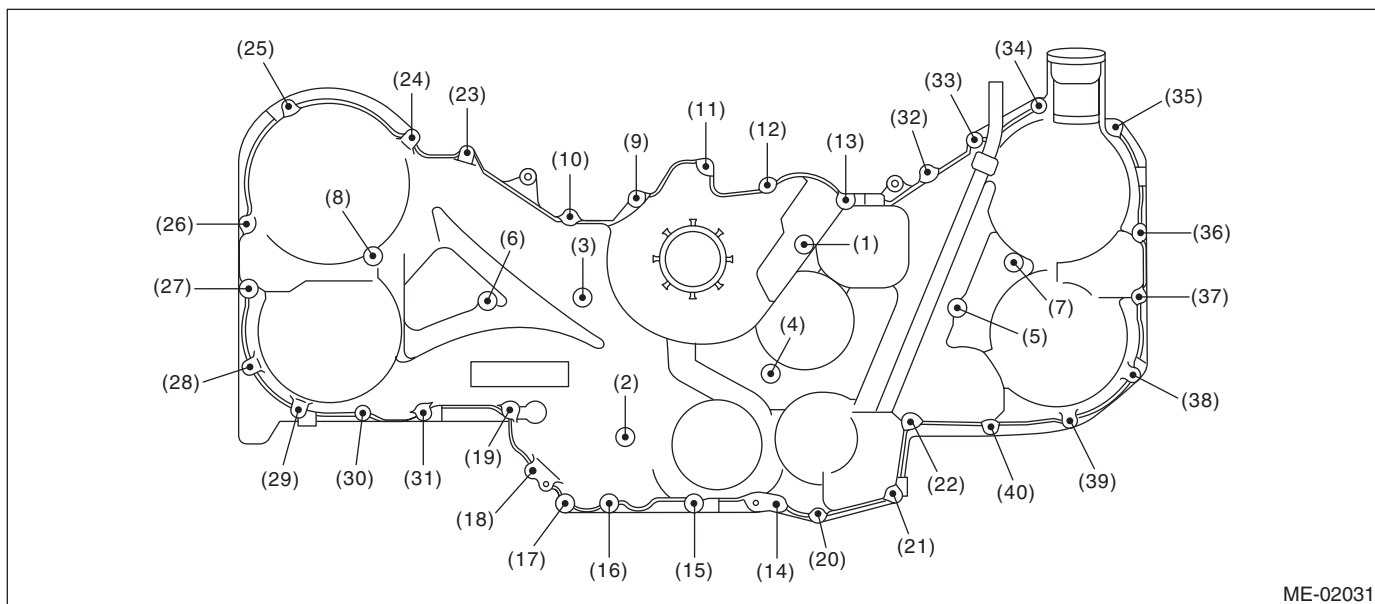

ME-02031

5) Install the crank pulley. <Ref. to ME(H6DO)-41, INSTALLATION, Crank Pulley.>

**C: INSPECTION**

Check the cover surface for scratch and damage.  
Check for oil leakage on cover mating surface and installation part of crank pulley.