28.Engine Trouble in General A: INSPECTION

NOTE:

"RANK" shown in the chart refers to the possibility of the cause of trouble in order "Very often" to "Rarely" A — Very often

- B Sometimes
- C Rarely

Symptom	Problem parts etc.	Possible cause	RANK
1. Engine does not start.			
1) Starter does not turn.	Starter	Defective battery-to-starter harness	В
		Defective starter switch	С
		Defective inhibitor switch or neutral switch	С
		Defective starter	В
	Battery	Improper connection of terminal	Α
		Run-down battery	Α
		Defective charging system	В
	Friction	Seizure of crankshaft and connecting rod bearing	С
		Seized camshaft	С
		Seized or stuck piston and cylinder	С
2) Initial combustion does	Starter	Defective starter	С
not occur.	Engine control system <ref.< td=""><td>to EN(H6DO) (diag)-2, Basic Diagnostic Procedure.></td><td>Α</td></ref.<>	to EN(H6DO) (diag)-2, Basic Diagnostic Procedure.>	Α
	Fuel line	Defective fuel pump and relay	А
		Lack of or insufficient fuel	В
	Chain	Trouble	В
		Defective timing	В
	Compression	Incorrect valve clearance	С
		Loosened spark plug or defective gasket	С
		Loosened cylinder head bolt or defective gasket	С
		Improper valve sealing	С
		Defective valve stem	С
		Worn or broken valve spring	В
		Worn or stuck piston rings, cylinder and piston	С
		Incorrect valve timing	В
		Improper engine oil (low viscosity)	В
		Trouble of valve lifter	С
		Trouble of valve lifter. (In case noise occurs with valve moving. Or the harness involved to oil switching sole- noid valve, variable valve lift diagnosis oil pressure switch and variable valve lift has trouble in a past.)	В

MECHANICAL

Symptom	Problem parts etc.	Possible cause	RANK
3) Initial combustion occurs.	Engine control system <ref. (diag)-2,="" basic="" diagnostic="" en(h6do)="" procedure.="" to=""></ref.>		Α
	Intake system	Defective intake manifold gasket	В
		Defective throttle body gasket	В
	Fuel line	Defective fuel pump and relay	С
		Clogged fuel line	С
		Lack of or insufficient fuel	В
	Chain	Trouble	В
		Defective timing	В
	Compression	Incorrect valve clearance	С
		Loosened spark plug or defective gasket	С
		Loosened cylinder head bolt or defective gasket	С
		Improper valve sealing	С
		Defective valve stem	С
		Worn or broken valve spring	В
		Worn or stuck piston rings, cylinder and piston	С
		Incorrect valve timing	В
		Improper engine oil (low viscosity)	В
		Trouble of valve lifter	С
		Trouble of valve lifter. (In case noise occurs with valve	В
		moving. Or the harness involved to oil switching sole-	
		noid valve, variable valve lift diagnosis oil pressure	
· · · · · · · · · · · · · · · · · · ·		switch and variable valve lift has trouble in a past.)	
		o EN(H6DO) (diag)-2, Basic Diagnostic Procedure.>	A
	Intake system	Loosened or cracked intake duct	B
		Loosened or cracked PCV hose	C
		Loosened or cracked vacuum hose	С
		Defective intake manifold gasket	B
		Defective throttle body gasket	B
		Dirty air cleaner element	C
	Fuel line	Clogged fuel line	С
		Lack of or insufficient fuel	B
	Chain	Trouble	B
		Defective timing	В
	Compression	Incorrect valve clearance	C
		Loosened spark plug or defective gasket	C
		Loosened cylinder head bolt or defective gasket	C
		Improper valve sealing	C
		Defective valve stem	С
		Worn or broken valve spring	B
		Worn or stuck piston rings, cylinder and piston	С
		Incorrect valve timing	В
		Improper engine oil (low viscosity)	В
		Trouble of valve lifter	С
		Trouble of valve lifter. (In case noise occurs with valve moving. Or the harness involved to oil switching sole- noid valve, variable valve lift diagnosis oil pressure switch and variable valve lift has trouble in a past.)	В

ME(H6DO)-84

Symptom	Problem parts etc.	Possible cause	RANK
2. Rough idle and engine stall	Engine control system <ref. (diag)-2,="" basic="" diagnostic="" en(h6do)="" procedure.="" to=""></ref.>		Α
	Intake system	Loosened or cracked intake duct	Α
		Loosened or cracked PCV hose	Α
		Loosened or cracked vacuum hose	Α
		Defective intake manifold gasket	В
		Defective throttle body gasket	В
		Defective PCV valve	С
		Loosened oil filler cap	В
		Dirty air cleaner element	С
	Fuel line	Defective fuel pump and relay	С
		Clogged fuel line	С
		Lack of or insufficient fuel	В
	Chain	Defective timing	С
	Compression	Incorrect valve clearance	В
		Loosened spark plug or defective gasket	В
		Loosened cylinder head bolt or defective gasket	В
		Improper valve sealing	В
		Defective valve stem	С
		Worn or broken valve spring	В
		Worn or stuck piston rings, cylinder and piston	В
		Incorrect valve timing	Α
		Improper engine oil (low viscosity)	В
		Trouble of valve lifter	С
		Trouble of valve lifter. (In case noise occurs with valve moving. Or the harness involved to oil switching sole- noid valve, variable valve lift diagnosis oil pressure switch and variable valve lift has trouble in a past.)	В
	Lubrication system	Incorrect oil pressure	В
		Defective rocker cover gasket	С
	Cooling system	Over-heating	С
	Others	Evaporative emission control system malfunction	Α
		Stuck or damaged throttle valve	В

MECHANICAL

Engine Trouble in General

Symptom	Problem parts etc.	Possible cause	RANK
3. Low output, hesitation and	Engine control system <ref. (diag)-2,="" basic="" diagnostic="" en(h6do)="" procedure.="" to=""></ref.>		Α
poor acceleration	Intake system	Loosened or cracked intake duct	Α
		Loosened or cracked PCV hose	Α
		Loosened or cracked vacuum hose	В
		Defective intake manifold gasket	В
		Defective throttle body gasket	В
		Defective PCV valve	В
		Loosened oil filler cap	В
		Dirty air cleaner element	Α
	Fuel line	Defective fuel pump and relay	В
		Clogged fuel line	В
		Lack of or insufficient fuel	С
	Chain	Defective timing	В
	Compression	Incorrect valve clearance	В
		Loosened spark plug or defective gasket	В
		Loosened cylinder head bolt or defective gasket	В
		Improper valve sealing	В
		Defective valve stem	С
		Worn or broken valve spring	В
		Worn or stuck piston rings, cylinder and piston	С
		Incorrect valve timing	Α
		Improper engine oil (low viscosity)	В
		Trouble of valve lifter	С
		Trouble of valve lifter. (In case noise occurs with valve moving. Or the harness involved to oil switching sole- noid valve, variable valve lift diagnosis oil pressure switch and variable valve lift has trouble in a past.)	В
	Lubrication system	Incorrect oil pressure	В
	Cooling system	Over-heating	С
		Over-cooling	С
	Others	Evaporative emission control system malfunction	Α

Symptom	Problem parts etc.	Possible cause	RANK
4. Surging	Engine control system <ref. (diag)-2,="" basic="" diagnostic="" en(h6do)="" procedure.="" to=""></ref.>		
	Intake system	Loosened or cracked intake duct	А
		Loosened or cracked PCV hose	А
		Loosened or cracked vacuum hose	А
		Defective intake manifold gasket	В
		Defective throttle body gasket	В
		Defective PCV valve	В
		Loosened oil filler cap	В
		Dirty air cleaner element	В
	Fuel line	Defective fuel pump and relay	В
		Clogged fuel line	В
		Lack of or insufficient fuel	С
	Chain	Defective timing	В
	Compression	Incorrect valve clearance	В
		Loosened spark plug or defective gasket	С
		Loosened cylinder head bolt or defective gasket	С
		Improper valve sealing	С
		Defective valve stem	С
		Worn or broken valve spring	С
		Worn or stuck piston rings, cylinder and piston	С
		Incorrect valve timing	А
		Improper engine oil (low viscosity)	В
		Trouble of valve lifter	С
		Trouble of valve lifter. (In case noise occurs with valve moving. Or the harness involved to oil switching sole- noid valve, variable valve lift diagnosis oil pressure switch and variable valve lift has trouble in a past.)	В
	Cooling system	Over-heating	В
	Others	Evaporative emission control system malfunction	С
5. Engine does not return to idle.	Engine control system <ref. (diag)-2,="" basic="" diagnostic="" en(h6do)="" procedure.="" to=""></ref.>		А
	Intake system	Loosened or cracked vacuum hose	А
	Others	Stuck or damaged throttle valve	А
6. Dieseling (Run-on)	Engine control system <ref. td="" to<=""><td>EN(H6DO) (diag)-2, Basic Diagnostic Procedure.></td><td>А</td></ref.>	EN(H6DO) (diag)-2, Basic Diagnostic Procedure.>	А
	Cooling system	Over-heating	В
	Others	Evaporative emission control system malfunction	В

MECHANICAL

Symptom	Problem parts etc.	Possible cause	RANK
7. After burning in exhaust	Engine control system <ref. td="" to<=""><td>EN(H6DO) (diag)-2, Basic Diagnostic Procedure.></td><td>Α</td></ref.>	EN(H6DO) (diag)-2, Basic Diagnostic Procedure.>	Α
system	Intake system	Loosened or cracked intake duct	С
		Loosened or cracked PCV hose	С
		Loosened or cracked vacuum hose	В
		Defective PCV valve	В
		Loosened oil filler cap	С
	Chain	Defective timing	В
	Compression	Incorrect valve clearance	В
		Loosened spark plug or defective gasket	С
		Loosened cylinder head bolt or defective gasket	С
		Improper valve sealing	В
		Defective valve stem	С
		Worn or broken valve spring	C
		Worn or stuck piston rings, cylinder and piston	C
		Incorrect valve timing	A
		Trouble of valve lifter	C
		Trouble of valve lifter. (In case noise occurs with valve	В
		moving. Or the harness involved to oil switching sole-	D
		noid valve, variable valve lift diagnosis oil pressure	
		switch and variable valve lift has trouble in a past.)	
	Lubrication system	Incorrect oil pressure	С
	Cooling system	Over-cooling	С
	Others	Evaporative emission control system malfunction	С
8. Knocking	Engine control system <ref. (diag)-2,="" basic="" diagnostic="" en(h6do)="" procedure.="" to=""></ref.>		Α
-	Intake system	Loosened oil filler cap	В
	Chain	Defective timing	В
	Compression	Incorrect valve clearance	С
		Incorrect valve timing	В
		Trouble of valve lifter	С
		Trouble of valve lifter. (In case noise occurs with valve	B
		moving. Or the harness involved to oil switching sole-	_
		noid valve, variable valve lift diagnosis oil pressure	
		switch and variable valve lift has trouble in a past.)	
	Cooling system	Over-heating	Α
9. Excessive engine oil con-	Intake system	Loosened or cracked PCV hose	Α
sumption		Defective PCV valve	В
		Loosened oil filler cap	С
	Compression	Defective valve stem	Α
		Worn or stuck piston rings, cylinder and piston	Α
	Lubrication system	Loosened oil pump attaching bolts and defective gas- ket	В
		Defective oil filter O-ring	В
		Defective crankshaft oil seal	В
		Defective rocker cover gasket	B
		Loosened oil drain plug or defective gasket	B
		Loosened oil pan fitting bolts or defective oil pan	B

ME(H6DO)-88

Symptom	Problem parts etc.	Possible cause	RANK
10. Excessive fuel consump-	Engine control system <ref. (diag)-2,="" basic="" diagnostic="" en(h6do)="" procedure.="" to=""></ref.>		Α
tion	Intake system	Dirty air cleaner element	Α
	Chain	Defective timing	В
	Compression	Incorrect valve clearance	В
		Loosened spark plug or defective gasket	С
		Loosened cylinder head bolt or defective gasket	С
		Improper valve sealing	В
		Defective valve stem	С
		Worn or broken valve spring	С
		Worn or stuck piston rings, cylinder and piston	В
		Incorrect valve timing	В
		Trouble of valve lifter	С
		Trouble of valve lifter. (In case noise occurs with valve moving. Or the harness involved to oil switching sole- noid valve, variable valve lift diagnosis oil pressure switch and variable valve lift has trouble in a past.)	В
	Lubrication system	Incorrect oil pressure	С
	Cooling system	Over-cooling	С

ME(H6DO)-89