

General Description

STARTING/CHARGING SYSTEMS

1. General Description

A: SPECIFICATION

Specifications for the 3.0 L DOHC non-turbo model are included in the SC(H4SO) section. <Ref. to SC(H4SO)-2, General Description.>

ENGINE (DIAGNOSTICS)

EN(H6DO)(diag)

	Page
1. Basic Diagnostic Procedure	2
2. Check List for Interview	3
3. General Description	5
4. Electrical Component Location	8
5. Engine Control Module (ECM) I/O Signal	17
6. Engine Condition Data	21
7. Data Link Connector	22
8. General Scan Tool	23
9. Subaru Select Monitor	27
10. Read Diagnostic Trouble Code (DTC)	35
11. Inspection Mode	36
12. Drive Cycle	41
13. Clear Memory Mode	45
14. Compulsory Valve Operation Check Mode	46
15. Malfunction Indicator Light	48
16. Diagnostics for Engine Starting Failure	57
17. List of Diagnostic Trouble Code (DTC)	70
18. Diagnostic Procedure with Diagnostic Trouble Code (DTC)	78
19. General Diagnostic Table	363