

# Torque Converter Turbine Speed Sensor

AUTOMATIC TRANSMISSION

---

## 16. Torque Converter Turbine Speed Sensor

### A: REMOVAL

For removal procedure of the torque converter turbine speed sensor, refer to “Front Vehicle Speed Sensor”. <Ref. to 4AT-50, REMOVAL, Front Vehicle Speed Sensor.>

### B: INSTALLATION

For installation procedure of the torque converter turbine speed sensor, refer to “Front Vehicle Speed Sensor”. <Ref. to 4AT-51, INSTALLATION, Front Vehicle Speed Sensor.>