

# Air Breather Hose


AUTOMATIC TRANSMISSION

---

## 23. Air Breather Hose

### A: REMOVAL


- 1) Remove the air intake chamber.  
<Ref. to IN(H4SO)-7, REMOVAL, Air Intake Chamber.>
- 2) Disconnect the air breather hose.

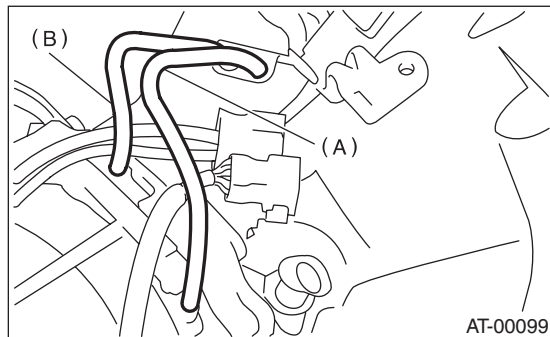

- (A) Air breather hose (Transmission case)
- (B) Air breather hose (Oil pump housing)

### B: INSTALLATION

- 1) Install the air breather hose.

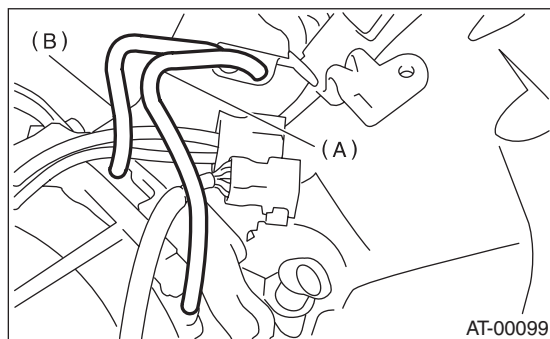

- (A) Air breather hose (Transmission case)
- (B) Air breather hose (Oil pump housing)

- 2) Install the air intake chamber.  
<Ref. to IN(H4SO)-7, INSTALLATION, Air Intake Chamber.>

### C: INSPECTION

Make sure the hose is not cracked or clogged.