


## 24.Oil Charge Pipe

### A: REMOVAL

- 1) Remove the air intake chamber.  
<Ref. to IN(H4SO)-7, REMOVAL, Air Intake Chamber.>
- 2) Remove the oil charge pipe, and then remove the O-ring from the flange side.

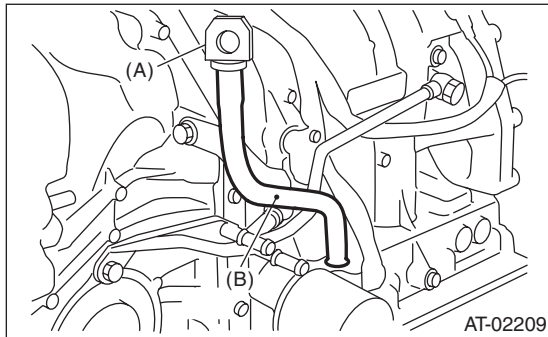


- (A) Oil level gauge
- (B) Oil charge pipe

### B: INSTALLATION

- 1) Apply ATF on a new O-ring and install together with the oil charge pipe.

#### *Tightening torque:*

**41 N·m (4.2 kgf·m, 30.4 ft·lb)**

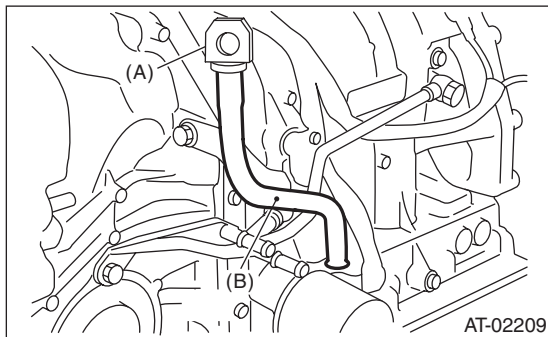

- (A) Oil level gauge
- (B) Oil charge pipe

- 2) Install the air intake chamber.  
<Ref. to IN(H4SO)-7, INSTALLATION, Air Intake Chamber.>

### C: INSPECTION

Make sure the oil charge pipe is not deformed or damaged.