

Read Diagnostic Trouble Code (DTC)

AUTOMATIC TRANSMISSION (DIAGNOSTICS)

7. Read Diagnostic Trouble Code (DTC)

A: OPERATION

Refer to "Subaru Select Monitor" for information about how to obtain and understand DTC. <Ref. to 5AT(diag)-16, OPERATION, Subaru Select Monitor.>

NOTE:

DTC can not be read by SPORT indicator light.