

9. General Diagnostic Table

A: INSPECTION

Symptoms	Possible cause	Corrective action
Select lever	Starter does not run.	Adjust the select cable and inhibitor switch, or inspect the circuit.
	Back-up light does not illuminate.	Adjust the select cable and inhibitor switch, or inspect the circuit.
	AT shift lock system does not operate normally.	Adjust the select cable and inhibitor switch, or inspect the circuit.
	Manual mode can not be set.	Adjust the mode switch and select lever, or inspect the circuit.
	Up-shift is not engaged at manual mode.	Check the shift-up switch and circuit.
	Down-shift is not engaged at manual mode.	Check the shift-down switch and circuit.

General Diagnostic Table

CONTROL SYSTEMS

AUTOMATIC TRANSMISSION

4AT

	Page
1. General Description	2
2. Automatic Transmission Fluid	26
3. Differential Gear Oil	28
4. Road Test	29
5. Stall Test	30
6. Time Lag Test	32
7. Line Pressure Test	33
8. Transfer Clutch Pressure Test	34
9. Automatic Transmission Assembly	35
10. Transmission Mounting System	42
11. Extension Case Oil Seal	44
12. Differential Side Retainer Oil Seal	45
13. Inhibitor Switch	46
14. Front Vehicle Speed Sensor	50
15. Rear Vehicle Speed Sensor	53
16. Torque Converter Turbine Speed Sensor	54
17. Control Valve Strainer	55
18. Control Valve Body	57
19. Air Bleeding of Control Valve	60
20. ATF Filter	61
21. Transmission Control Module (TCM)	62
22. ATF Cooler Pipe and Hose	63
23. Air Breather Hose	66
24. Oil Charge Pipe	67
25. Torque Converter Assembly	68
26. Extension Case	69
27. Transfer Clutch	71
28. Reduction Driven Gear	76
29. Reduction Drive Gear	78
30. Parking Pawl	80
31. Converter Case	81
32. Oil Pump Housing	83
33. Drive Pinion Shaft Assembly	89
34. Front Differential Assembly	95
35. AT Main Case	101
36. Transmission Control Device	122