

5. Oil Seal

A: INSPECTION

Check for leakage of gear oil from the oil seal. If there is oil leakage, replace with a new oil seal.

B: REPLACEMENT

- 1) Clean the transmission exterior.
- 2) Drain gear oil completely.


NOTE:

- Tighten the drain plug of the transmission gear oil after draining the gear oil.
- Use a new gasket.

Tightening torque:

44 N·m (4.5 kgf-m, 33 ft-lb) (Aluminum gasket)

70 N·m (7.1 kgf-m, 51 ft-lb) (Copper gasket)

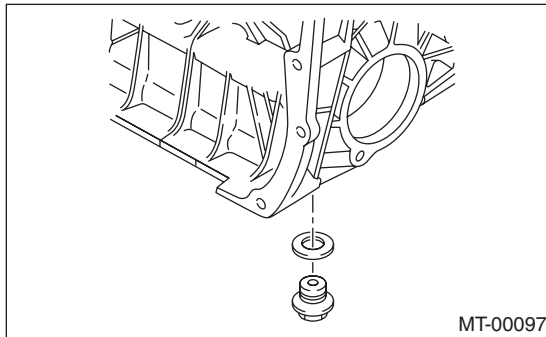


3) Remove the rear exhaust pipe and muffler. <Ref. to EX(H4SO)-8, REMOVAL, Rear Exhaust Pipe.> <Ref. to EX(H4SO)-10, REMOVAL, Muffler.>

4) Remove the heat shield cover. (If equipped)

5) Remove the propeller shaft. <Ref. to DS-10, REMOVAL, Propeller Shaft.>

6) Using the ST, remove the oil seal.


ST 398527700 PULLER ASSY

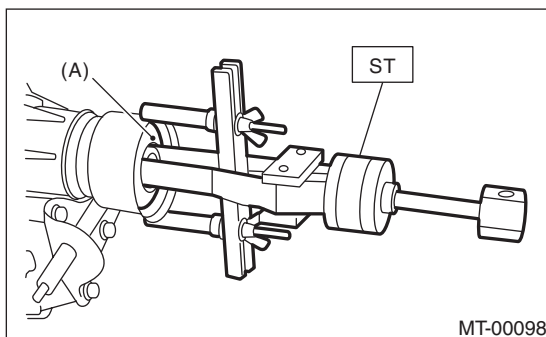

(A) Oil seal

7) Using the ST, install the oil seal.

ST 498057300 INSTALLER

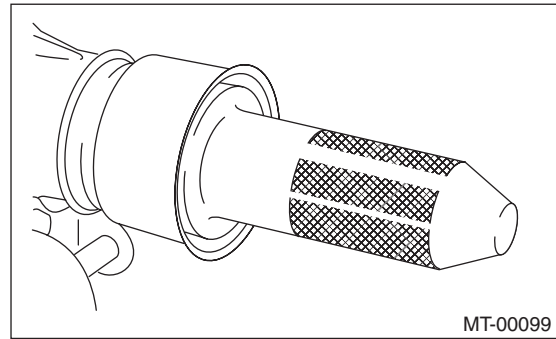

8) Install the propeller shaft. <Ref. to DS-11, INSTALLATION, Propeller Shaft.>

9) Install the heat shield cover. (If equipped)

10) Install the rear exhaust pipe and muffler. <Ref. to EX(H4SO)-8, INSTALLATION, Rear Exhaust Pipe.> <Ref. to EX(H4SO)-10, INSTALLATION, Muffler.>

11) Pour in gear oil and check the oil level. <Ref. to 5MT-23, REPLACEMENT, Transmission Gear Oil.>