

### 3. Front Differential Assembly

#### A: NOTE

##### 1. AT MODEL

- 4AT

For front differential of 4AT model, refer to “4AT” section. <Ref. to 4AT-95, Front Differential Assembly.>

- 5AT

For front differential of 5AT model, refer to “5AT” section. <Ref. to 5AT-89, Front Differential Assembly.>

##### 2. MT MODEL

For front differential of the manual transmission, refer to “5MT” section. <Ref. to 5MT-66, Front Differential Assembly.>