


3. Front Crossmember Support Plate


A: REMOVAL

- 1) Lift up the vehicle.
- 2) Remove the front under cover. <Ref. to EI-26, REMOVAL, Front Under Cover.>
- 3) Remove the bolt and remove front crossmember support plate.

- Large type

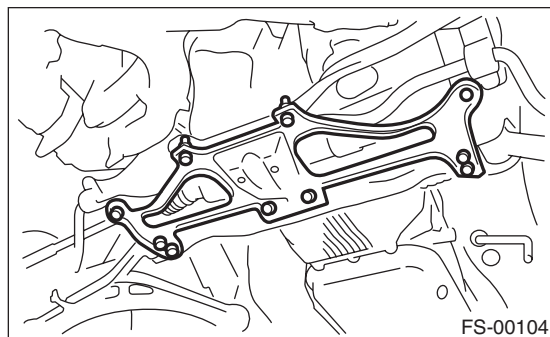

- Small type

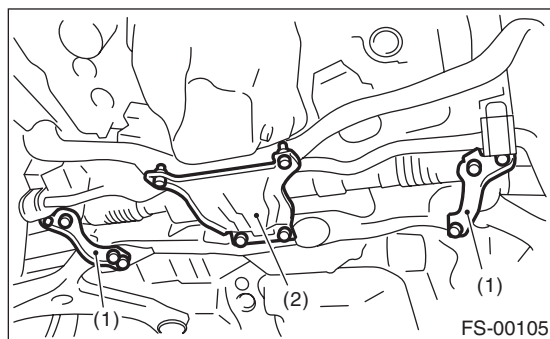

- (1) Crossmember support plate
- (2) Jack-up plate

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Tighten the small type crossmember support plate together with stabilizer bracket.

After installing the stabilizer bracket to the crossmember, tighten the crossmember support plate together.

Tightening torque:

Crossmember support plate:

60 N·m (6.1 kgf·m, 44.3 ft·lb)

Crossmember support plate (Tightened together with the stabilizer bracket):

25 N·m (2.5 kgf·m, 18.1 ft·lb)

Jack-up plate:

60 N·m (6.1 kgf·m, 44.3 ft·lb)