


# Front Stabilizer

## FRONT SUSPENSION


### 4. Front Stabilizer

#### A: REMOVAL

- 1) Lift-up the vehicle, and then remove the front wheels.
- 2) Remove the front under cover. <Ref. to EI-26, REMOVAL, Front Under Cover.>
- 3) Remove the front crossmember support plate. <Ref. to FS-13, REMOVAL, Front Crossmember Support Plate.>
- 4) Remove the stabilizer link.

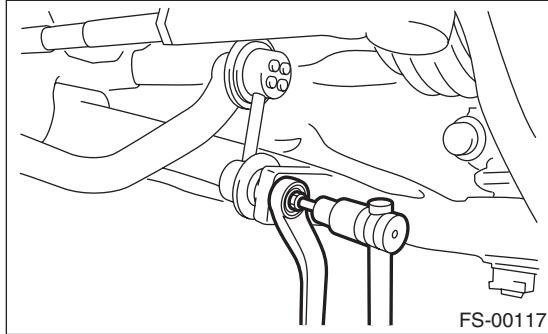

- 5) Remove the stabilizer bracket.

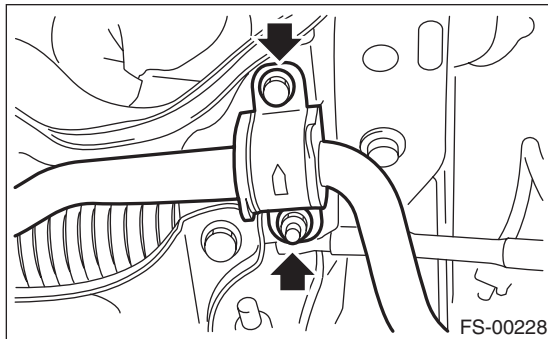


#### B: INSTALLATION

Install in the reverse order of removal.

##### NOTE:

- Use a new self-locking nut.
- Ensure the stabilizer bushing and stabilizer have the same identification colors.
- Install the stabilizer bushing (front crossmember side) while aligning it with the paint mark on stabilizer.
- The stabilizer bracket has a set orientation. Install it with the arrow mark facing the upper side of the vehicle.

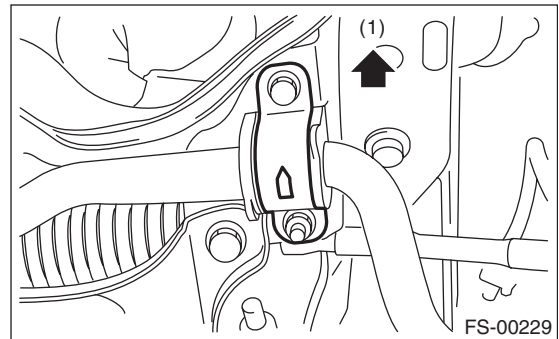

(1) Front side of vehicle

##### **Tightening torque:**

###### **Stabilizer link:**

**45 N·m (4.6 kgf-m, 33.2 ft-lb)**

###### **Stabilizer bracket:**

**25 N·m (2.5 kgf-m, 18.1 ft-lb)**

#### C: INSPECTION

- 1) Check the bushing for major cracks, fatigue or damages.
- 2) Check the stabilizer link for damage.