

# Reservoir Tank

POWER ASSISTED SYSTEM (POWER STEERING)

## 8. Reservoir Tank


### A: REMOVAL

- 1) Drain fluid from the reservoir tank.
- 2) Disconnect the hose from reservoir tank.

#### CAUTION:


To prevent foreign matter from entering the hose and pipe, cover the open ends of them with clean cloth.

- H4 model

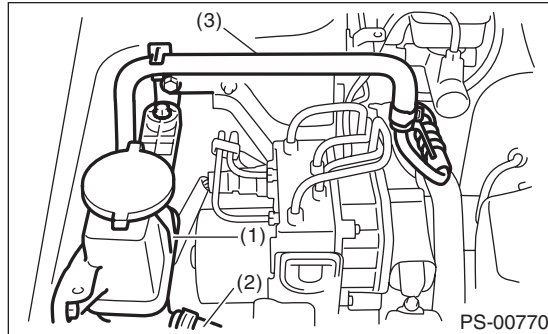

- (1) Reservoir tank
- (2) Suction hose
- (3) Return hose

- H6 model

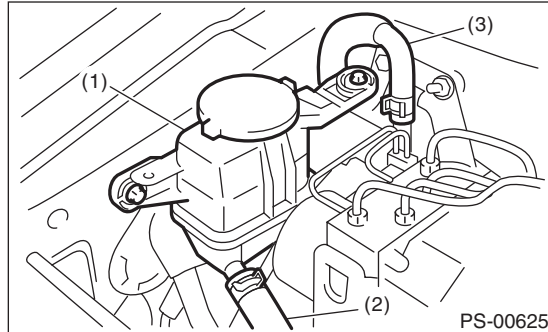

- (1) Reservoir tank
- (2) Suction hose
- (3) Return hose

- 3) Remove the reservoir tank from the body.


### B: INSTALLATION

- 1) Install the reservoir tank to the body.

#### Tightening torque:


**13 N·m (1.32 kgf-m, 9.6 ft-lb)**

- 2) Connect the hose to the reservoir tank.
- H4 model

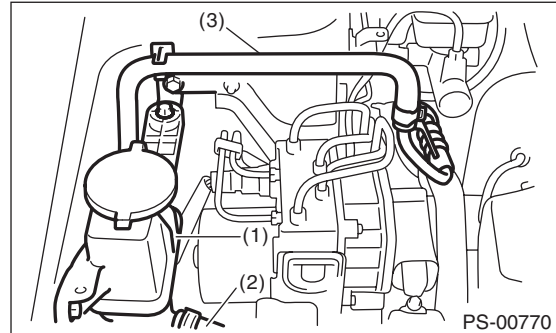

- (1) Reservoir tank
- (2) Suction hose
- (3) Return hose

- H6 model

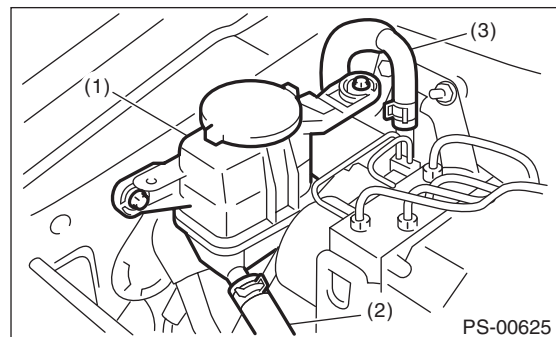

- (1) Reservoir tank
- (2) Suction hose
- (3) Return hose

- 3) Replenish power steering fluid up to the specified level. <Ref. to PS-54, Power Steering Fluid.>

### C: INSPECTION

Check the reservoir tank for cracks, breakage or damage. If a failure is found, replace the reservoir tank.