


Sub Frame Support Arm

REAR SUSPENSION

9. Sub Frame Support Arm

A: REMOVAL

- 1) Lift-up the vehicle and support the rear sub frame with a support stand.
- 2) Remove the sub frame support arm.

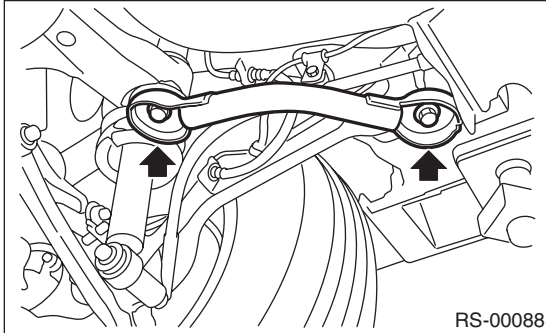

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Sub frame support arm-to-Rear arm bracket
125 N·m (12.7 kgf·m, 92 ft·lb)

Sub frame support arm-to-Rear sub frame
175 N·m (17.8 kgf·m, 129 ft·lb)

C: INSPECTION

Visually check the sub frame support arm for damage and deformation.