TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

## 10.List of Diagnostic Trouble Code (DTC)

## A: LIST

DTC	Contents	Contents of diagnosis	REMARKS
11	FL Air Pressure Decrease	FL tire pressure is reduced.	<ref. 11="" dtc="" fl<br="" to="" tpm(diag)-29,="">AIR PRESSURE DECREASE, Diag- nostic Procedure with Diagnostic Trou- ble Code (DTC).&gt;</ref.>
12	FR Air Pressure Decrease	FR tire pressure is reduced.	<ref. 12="" dtc="" fr<br="" to="" tpm(diag)-29,="">AIR PRESSURE DECREASE, Diag- nostic Procedure with Diagnostic Trou- ble Code (DTC).&gt;</ref.>
13	RR Air Pressure Decrease	RR tire pressure is reduced.	<ref. 13="" dtc="" rr<br="" to="" tpm(diag)-29,="">AIR PRESSURE DECREASE, Diag- nostic Procedure with Diagnostic Trou- ble Code (DTC).&gt;</ref.>
14	RL Air Pressure Decrease	RL tire pressure is reduced.	<ref. 14="" dtc="" rl<br="" to="" tpm(diag)-29,="">AIR PRESSURE DECREASE, Diag- nostic Procedure with Diagnostic Trou- ble Code (DTC).&gt;</ref.>
21	No FL Transmitter Data	Data cannot be received from FL sen- sor.	<ref. 21="" dtc="" fl<br="" no="" to="" tpm(diag)-29,="">TRANSMITTER DATA, Diagnostic Pro- cedure with Diagnostic Trouble Code (DTC).&gt;</ref.>
22	No FR Transmitter Data	Data cannot be received from FR sen- sor.	<ref. 22="" dtc="" no<br="" to="" tpm(diag)-29,="">FR TRANSMITTER DATA, Diagnostic Procedure with Diagnostic Trouble Code (DTC).&gt;</ref.>
23	No RR Transmitter Data	Data cannot be received from RR sen- sor.	<ref. 23="" dtc="" no<br="" to="" tpm(diag)-30,="">RR TRANSMITTER DATA, Diagnostic Procedure with Diagnostic Trouble Code (DTC).&gt;</ref.>
24	No RL Transmitter Data	Data cannot be received from RL sen- sor.	<ref. 24="" dtc="" no="" rl<br="" to="" tpm(diag)-30,="">TRANSMITTER DATA, Diagnostic Pro- cedure with Diagnostic Trouble Code (DTC).&gt;</ref.>
31	FL Transmit Pres Data Abnormal	FL sensor data contents are abnormal.	<ref. 31="" dtc="" fl<br="" to="" tpm(diag)-31,="">TRANSMIT PRES DATA ABNOR- MAL, Diagnostic Procedure with Diag- nostic Trouble Code (DTC).&gt;</ref.>
32	FR Transmit Pres Data Abnormal	FR sensor data contents are abnormal.	<ref. 32="" dtc="" fr<br="" to="" tpm(diag)-31,="">TRANSMIT PRES DATA ABNOR- MAL, Diagnostic Procedure with Diag- nostic Trouble Code (DTC).&gt;</ref.>
33	RR Transmit Pres Data Abnormal	RR sensor data contents are abnormal.	<ref. 33="" dtc="" rr<br="" to="" tpm(diag)-31,="">TRANSMIT PRES DATA ABNOR- MAL, Diagnostic Procedure with Diag- nostic Trouble Code (DTC).&gt;</ref.>
34	RL Transmit Pres Data Abnormal	RL sensor data contents are abnormal.	<ref. 34="" dtc="" rl<br="" to="" tpm(diag)-32,="">TRANSMIT PRES DATA ABNOR- MAL, Diagnostic Procedure with Diag- nostic Trouble Code (DTC).&gt;</ref.>
41	FL Trans Function Code Abnormal	Function code has error.	<ref. 41="" dtc="" fl<br="" to="" tpm(diag)-33,="">TRANS FUNCTION CODE ABNOR- MAL, Diagnostic Procedure with Diag- nostic Trouble Code (DTC).&gt;</ref.>

## List of Diagnostic Trouble Code (DTC)

## TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

DTC	Contents	Contents of diagnosis	REMARKS
42	FR Trans Function Code Abnormal	Function code has error.	<ref. 42="" dtc="" fr<br="" to="" tpm(diag)-33,="">TRANS FUNCTION CODE ABNOR- MAL, Diagnostic Procedure with Diag- nostic Trouble Code (DTC).&gt;</ref.>
43	RR Trans Function Code Abnormal	Function code has error.	<ref. 43="" dtc="" rr<br="" to="" tpm(diag)-33,="">TRANS FUNCTION CODE ABNOR- MAL, Diagnostic Procedure with Diag- nostic Trouble Code (DTC).&gt;</ref.>
44	RL Trans Function Code Abnormal	Function code has error.	<ref. 44="" dtc="" rl<br="" to="" tpm(diag)-34,="">TRANS FUNCTION CODE ABNOR- MAL, Diagnostic Procedure with Diag- nostic Trouble Code (DTC).&gt;</ref.>
51	FL Transmit Battery Low Voltage	Transmitter battery voltage is low.	<ref. 51="" dtc="" fl<br="" to="" tpm(diag)-35,="">TRANSMIT BATTERY LOW VOLT- AGE, Diagnostic Procedure with Diag- nostic Trouble Code (DTC).&gt;</ref.>
52	FR Transmit Battery Low Voltage	Transmitter battery voltage is low.	<ref. 52="" dtc="" fr<br="" to="" tpm(diag)-35,="">TRANSMIT BATTERY LOW VOLT- AGE, Diagnostic Procedure with Diag- nostic Trouble Code (DTC).&gt;</ref.>
53	RR Transmit Battery Low Voltage	Transmitter battery voltage is low.	<ref. 53="" dtc="" rr<br="" to="" tpm(diag)-35,="">TRANSMIT BATTERY LOW VOLT- AGE, Diagnostic Procedure with Diag- nostic Trouble Code (DTC).&gt;</ref.>
54	RL Transmit Battery Low Voltage	Transmitter battery voltage is low.	<ref. 54="" dtc="" rl<br="" to="" tpm(diag)-35,="">TRANSMIT BATTERY LOW VOLT- AGE, Diagnostic Procedure with Diag- nostic Trouble Code (DTC).&gt;</ref.>
61	Vehicle Speed Is Abnormal	Vehicle speed signal is not input to the control module when the vehicle speed is more than 6 km/h (3.7 MPH).	<ref. 61="" dtc="" to="" tpm(diag)-36,="" vehi-<br="">CLE SPEED IS ABNORMAL, Diag- nostic Procedure with Diagnostic Trouble Code (DTC).&gt;</ref.>