

General Diagnostic Table

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

12.General Diagnostic Table

A: INSPECTION

Symptoms		Problem parts
Tire pressure warning light illuminates.	Tire pressure is reduced.	<ul style="list-style-type: none">• Improper tire pressure adjustment.• Punctured tire
Tire pressure warning light blinks.	Tire pressure monitoring system has malfunction.	<ul style="list-style-type: none">• Air pressure sensor malfunction.• Air pressure sensor is out of battery.• Tire pressure monitoring control module is faulty.• Defective vehicle harness
Tire pressure is dropping but the warning light does not illuminate.	Tire pressure warning light does not illuminate.	<ul style="list-style-type: none">• Air pressure sensor is faulty.• Tire pressure monitoring control module is faulty.• Defective vehicle harness

DIFFERENTIALS

DI

	Page
1. General Description	2
2. Differential Gear Oil	24
3. Front Differential Assembly	26
4. Rear Differential (T-type)	27
5. Rear Differential (VA-type)	44
6. Rear Differential Front Oil Seal	74
7. Rear Differential Side Oil Seal	76
8. Rear Differential Front Member	77
9. General Diagnostic Table	78