

## 5. Oil Seal

### A: NOTE

For replacement and inspection, refer to the 4AT, 5AT or 5MT section.

4AT model:

<Ref. to 4AT-44, Extension Case Oil Seal.> <Ref. to 4AT-45, Differential Side Retainer Oil Seal.>

5AT model:

<Ref. to 5AT-44, Extension Case Oil Seal.> <Ref. to 5AT-45, Differential Side Retainer Oil Seal.>

5MT model:

<Ref. to 5MT-31, Oil Seal.> <Ref. to 5MT-32, Differential Side Retainer Oil Seal.>