

## List of Diagnostic Trouble Code (DTC)

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

### 11. List of Diagnostic Trouble Code (DTC)

#### A: LIST

| DTC   | Detailed code                             | Display  | Content of diagnosis                                     | Reference target   |   |
|-------|---|--|--|--|---|
| C0021 | 698XH                                     | FR sensor power supply failure                         | Front ABS wheel speed sensor RH power supply malfunction | <Ref. to VDC(diag)-42, DTC C0021 FRONT ABS WHEEL SPEED SENSOR RH POWER SUPPLY MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |   |
|       | 6A0XH                                     | Front Right ABS Sensor Circuit Open or Shorted Battery | Open/high input of front ABS wheel speed sensor RH       | <Ref. to VDC(diag)-44, DTC C0021 OPEN/HIGH INPUT OF FRONT ABS WHEEL SPEED SENSOR RH, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>       |   |
| C0022 | 68CXH<br>68EXH<br>690XH<br>694XH<br>696XH | Front Right ABS Sensor Signal                          | Front ABS wheel speed sensor RH signal malfunction       | <Ref. to VDC(diag)-47, DTC C0022 FRONT ABS WHEEL SPEED SENSOR RH SIGNAL MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>       |   |
|       | 618XH                                     | FL sensor power supply failure                         | Ront ABS wheel speed sensor LH power supply malfunction  | <Ref. to VDC(diag)-42, DTC C0023 FRONT ABS WHEEL SPEED SENSOR LH POWER SUPPLY MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |   |
|       |   | 620XH  | Front Left ABS Sensor Circuit Open or Shorted Battery    | Open/high input of front ABS wheel speed sensor LH   | <Ref. to VDC(diag)-44, DTC C0023 OPEN/HIGH INPUT OF FRONT ABS WHEEL SPEED SENSOR LH, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>      |
|       | C0024                                     | 60CXH<br>60EXH<br>610XH<br>614XH<br>616XH              | Front Left ABS Sensor Signal                             | Front ABS wheel speed sensor LH signal malfunction   | <Ref. to VDC(diag)-47, DTC C0024 FRONT ABS WHEEL SPEED SENSOR LH SIGNAL MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>      |
|       |   | 658XH  | RR sensor power supply failure                           | Rear ABS wheel speed sensor RH power supply malfunction  | <Ref. to VDC(diag)-42, DTC C0025 REAR ABS WHEEL SPEED SENSOR RH POWER SUPPLY MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 660XH |   |  | Rear Right ABS Sensor Circuit Open or Shorted Battery    | Open/high input of rear ABS wheel speed sensor RH  | <Ref. to VDC(diag)-44, DTC C0025 OPEN/HIGH INPUT OF REAR ABS WHEEL SPEED SENSOR RH, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>       |
| C0026 |   | 64CXH<br>64EXH<br>650XH<br>654XH<br>656XH              | Rear Right ABS Sensor Signal                             | Rear ABS wheel speed sensor RH signal malfunction  | <Ref. to VDC(diag)-47, DTC C0026 REAR ABS WHEEL SPEED SENSOR RH SIGNAL MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>       |
|       | 6D8XH                                     | RL sensor power supply failure                         | Rear ABS wheel speed sensor LH power supply Malfunction  | <Ref. to VDC(diag)-43, DTC C0027 REAR ABS WHEEL SPEED SENSOR LH POWER SUPPLY MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>  |   |
|       |   | 6E0XH  | Rear Left ABS Sensor Circuit Open or Shorted Battery     | Open/high input of rear ABS wheel speed sensor LH  | <Ref. to VDC(diag)-45, DTC C0027 OPEN/HIGH INPUT OF REAR ABS WHEEL SPEED SENSOR LH, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>       |
|       | C0028                                     | 6CCXH<br>6CEXH<br>6D0XH<br>6D4XH<br>6D6XH              | Rear Left ABS Sensor Signal                              | Rear ABS wheel speed sensor LH signal malfunction  | <Ref. to VDC(diag)-48, DTC C0028 REAR ABS WHEEL SPEED SENSOR LH SIGNAL MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>       |

# List of Diagnostic Trouble Code (DTC)

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

| DTC   | Detailed code   | Display                                | Content of diagnosis  | Reference target  |
|-------|---|--|---|---|
| C0029 | 608XH<br>648XH<br>688XH<br>6C8XH<br>704XH<br>606XH<br>646XH<br>686XH<br>6C6XH<br>702XH<br>604XH<br>644XH<br>684XH<br>6C4XH<br>70CXH<br>720XH<br>710XH | Any One of Four ABS Sensors Signal     | ABS wheel speed sensor signal malfunction in one of four wheels | <Ref. to VDC(diag)-51, DTC C0029 ABS WHEEL SPEED SENSOR SIGNAL MALFUNCTION IN ONE OF FOUR WHEELS, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| C0031 | 320XH   | FR hold valve malfunction              | Front inlet solenoid valve RH malfunction in VDCCM&H/U          | <Ref. to VDC(diag)-53, DTC C0031 FRONT INLET SOLENOID VALVE RH MALFUNCTION IN VDCCM&H/U, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>          |
| C0032 | 360XH   | FR pressure reducing valve malfunction | Front outlet solenoid valve RH malfunction in VDCCM&H/U         | <Ref. to VDC(diag)-53, DTC C0032 FRONT OUTLET SOLENOID VALVE RH MALFUNCTION IN VDCCM&H/U, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>         |
| C0033 | 220XH   | FL hold valve malfunction              | Front inlet solenoid valve LH malfunction in VDCCM&H/U          | <Ref. to VDC(diag)-53, DTC C0033 FRONT INLET SOLENOID VALVE LH MALFUNCTION IN VDCCM&H/U, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>          |
| C0034 | 260XH   | FL pressure reducing valve malfunction | Front outlet solenoid valve LH malfunction in VDCCM&H/U         | <Ref. to VDC(diag)-53, DTC C0034 FRONT OUTLET SOLENOID VALVE LH MALFUNCTION IN VDCCM&H/U, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>         |
| C0035 | 2A0XH   | RR hold valve malfunction              | Rear inlet solenoid valve RH malfunction in VDCCM&H/U           | <Ref. to VDC(diag)-53, DTC C0035 REAR INLET SOLENOID VALVE RH MALFUNCTION IN VDCCM&H/U, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>           |
| C0036 | 2E0XH   | RR pressure reducing valve malfunction | Rear outlet solenoid valve RH malfunction in VDCCM&H/U          | <Ref. to VDC(diag)-54, DTC C0036 REAR OUTLET SOLENOID VALVE RH MALFUNCTION IN VDCCM&H/U, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>          |
| C0037 | 3A0XH   | RL hold valve malfunction              | Rear inlet solenoid valve LH malfunction in VDCCM&H/U           | <Ref. to VDC(diag)-54, DTC C0037 REAR INLET SOLENOID VALVE LH MALFUNCTION IN VDCCM&H/U, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>           |
| C0038 | 3E0XH   | RL pressure reducing valve malfunction | Rear outlet solenoid valve LH malfunction in VDCCM&H/U          | <Ref. to VDC(diag)-54, DTC C0038 REAR OUTLET SOLENOID VALVE LH MALFUNCTION IN VDCCM&H/U, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>          |
| C0061 | 4A0XH   | VDC switching valve 1 (S)              | Secondary cut valve malfunction in VDCCM&H/U                    | <Ref. to VDC(diag)-54, DTC C0061 SECONDARY CUT VALVE MALFUNCTION IN VDCCM&H/U, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>                    |
| C0062 | 4E0XH   | VDC switching valve 1 (P)              | Primary cut valve malfunction in VDCCM&H/U                      | <Ref. to VDC(diag)-54, DTC C0062 PRIMARY CUT VALVE MALFUNCTION IN VDCCM&H/U, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>                      |
| C0063 | 520XH   | VDC switching valve 2 (S)              | Secondary suction valve malfunction in VDCCM&H/U                | <Ref. to VDC(diag)-54, DTC C0063 SECONDARY SUCTION VALVE MALFUNCTION IN VDCCM&H/U, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>                |

## List of Diagnostic Trouble Code (DTC)

### VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

| DTC   | Detailed code   | Display                                     | Content of diagnosis   | Reference target   |
|-------|---|---|--|--|
| C0064 | 560XH   | VDC switching valve 2 (P)                   | Primary suction valve malfunction in VDCCM&H/U               | <Ref. to VDC(diag)-55, DTC C0064 PRIMARY SUCTION VALVE MALFUNCTION IN VDCCM&H/U, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| C0041 | 000XH<br>002XH<br>004XH<br>006XH<br>010XH<br>012XH<br>014XH<br>016XH<br>018XH<br>01AXH<br>01EXH<br>024XH<br>026XH<br>028XH<br>02AXH<br>02CXH<br>02EXH<br>030XH<br>03AXH<br>03CXH<br>03DXH<br>03EXH<br>034XH<br>036XH<br>038XH | ECM   | VDC control module malfunction                               | <Ref. to VDC(diag)-57, DTC C0041 VDC CONTROL MODULE MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>                 |
| C0042 | 7CEXH<br>7D0XH  | Power Supply Voltage Failure                | Power voltage malfunction                                    | <Ref. to VDC(diag)-59, DTC C0042 POWER VOLTAGE MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>                      |
|       | 7CCXH   | Speed sen. power supply failure             | ABS wheel speed sensor power malfunction                     | <Ref. to VDC(diag)-60, DTC C0042 ABS WHEEL SPEED SENSOR POWER MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>       |
| C0044 | 9A0XH   | TCM communication circuit                   | CAN communication malfunction of transmission control module | <Ref. to VDC(diag)-61, DTC C0044 AT COMMUNICATION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>                               |
| C0045 | 970XH<br>822XH  | Incorrect VDC Control Module specifications | Different VDC control module specification                   | <Ref. to VDC(diag)-62, DTC C0045 DIFFERENT VDC CONTROL MODULE SPECIFICATION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>     |
|       | 972XH   | TCM malfunction                             | AT control module malfunction                                | <Ref. to VDC(diag)-63, DTC C0045 AT CONTROL MODULE MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>                  |
| C0047 | 788XH<br>78CXH<br>7A0XH<br>7A4XH  | Improper CAN communication                  | Improper CAN communication                                   | <Ref. to VDC(diag)-64, DTC C0047 IMPROPER CAN COMMUNICATION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>                     |

# List of Diagnostic Trouble Code (DTC)

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

| DTC   | Detailed code  | Display                           | Content of diagnosis                                   | Reference target  |
|-------|----------------|-----------------------------------|--|---|
| C0051 | 048XH          | Valve relay OFF malfunction       | Valve relay OFF malfunction                            | <Ref. to VDC(diag)-66, DTC C0051 VALVE RELAY OFF MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>       |
|       | 04AXH<br>04CXH | Valve Relay                       | Valve relay malfunction                                | <Ref. to VDC(diag)-68, DTC C0051 VALVE RELAY MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>           |
|       | 06AXH          | Valve relay test failure          | Valve relay test malfunction                           | <Ref. to VDC(diag)-70, DTC C0051 VALVE RELAY TEST MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>      |
|       | 00DXH          | Valve relay ON failure            | Valve relay ON malfunction                             | <Ref. to VDC(diag)-72, DTC C0051 VALVE RELAY ON MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>        |
| C0052 | 58AXH          | Motor and Motor Relay             | Motor/motor relay malfunction                          | <Ref. to VDC(diag)-74, DTC C0052 MOTOR/MOTOR RELAY MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>     |
|       | 5A0XH          | Motor and motor relay OFF failure | Motor/motor relay OFF malfunction                      | <Ref. to VDC(diag)-76, DTC C0052 MOTOR/MOTOR RELAY OFF MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
|       | 58EXH          | Motor and motor relay ON failure  | Motor/motor relay ON malfunction                       | <Ref. to VDC(diag)-77, DTC C0052 MOTOR/MOTOR RELAY ON MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>  |
|       | 58CXH          | Motor malfunction                 | Motor  | <Ref. to VDC(diag)-78, DTC C0052 MOTOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>                             |
| C0054 | 0A0XH          | Brake Light Switch                | BLS open circuit                                       | <Ref. to VDC(diag)-79, DTC C0054 BLS OPEN CIRCUIT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>                  |
|       | 08CXH          | BLS ON malfunction                | BLS ON malfunction                                     | <Ref. to VDC(diag)-81, DTC C0054 BLS ON MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>                |
| C0057 | 820XH          | ECM communication circuit         | CAN communication malfunction of engine control module | <Ref. to VDC(diag)-82, DTC C0057 ECM COMMUNICATION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>                 |

## List of Diagnostic Trouble Code (DTC)

### VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

| DTC            | Detailed code   | Display  | Content of diagnosis                                       | Reference target   |  |
|----------------|---|--|--|--|--|
| C0071          | 148XH   | Steering angle sensor offset is too big                              | Excessive steering angle sensor output offset              | <Ref. to VDC(diag)-83, DTC C0071 EXCESSIVE STEERING ANGLE SENSOR OUTPUT OFFSET, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>              |  |
|                | 14AXH   | Change range of steering angle sensor is too big                     | Excessive variation amount of steering angle sensor output | <Ref. to VDC(diag)-85, DTC C0071 EXCESSIVE VARIATION AMOUNT OF STEERING ANGLE SENSOR OUTPUT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |  |
|                | 142XH<br>144XH<br>146XH<br>14EXH<br>158XH<br>15AXH<br>15CXH<br>15EXH<br>14CXH<br>164XH<br>166XH<br>16AXH<br>16CXH<br>16EXH<br>170XH | Steering angle sensor malfunction                                    | Steering angle sensor output                               | <Ref. to VDC(diag)-87, DTC C0071 STEERING ANGLE SENSOR OUTPUT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>                               |  |
|                | 160XH   | No signal from steering angle sensor                                 | Steering angle sensor communication                        | <Ref. to VDC(diag)-89, DTC C0071 STEERING ANGLE SENSOR COMMUNICATION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>                        |  |
|                | 764XH   | Steering angle sensor power supply malfunction                       | Steering angle sensor power supply malfunction             | <Ref. to VDC(diag)-91, DTC C0071 STEERING ANGLE SENSOR POWER SUPPLY MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>             |  |
|                | C0072   | 184XH<br>188XH<br>18EXH  | Abnormal yaw rate sensor output                            | Yaw rate sensor output   | <Ref. to VDC(diag)-93, DTC C0072 YAW RATE SENSOR OUTPUT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
|                |   | 180XH<br>182XH<br>186XH<br>190XH<br>194XH<br>196XH<br>198XH<br>19AXH | Abnormal yaw rate sensor output                            | Yaw rate sensor output   | <Ref. to VDC(diag)-93, DTC C0072 YAW RATE SENSOR OUTPUT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 192XH          |   | Abnormal yaw rate sensor output                                      | Yaw rate sensor output                                     | <Ref. to VDC(diag)-93, DTC C0072 YAW RATE SENSOR OUTPUT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>                                     |  |
| 1A0XH<br>18BXH |   | Voltage inputted to yaw rate sensor exceeds specification            | Yaw rate sensor power supply/output                        | <Ref. to VDC(diag)-95, DTC C0072 YAW RATE SENSOR POWER/OUTPUT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>                               |  |
| 19CXH          |   | Abnormal yaw rate sensor reference voltage                           | Yaw rate sensor reference                                  | <Ref. to VDC(diag)-97, DTC C0072 YAW RATE SENSOR REFERENCE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>                                  |  |
| 18CXH          |   | Change range of yaw rate sensor signal is too big                    | Excessive variation amount of yaw rate sensor output       | <Ref. to VDC(diag)-99, DTC C0072 EXCESSIVE VARIATION AMOUNT OF YAW RATE SENSOR OUTPUT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>       |  |

# List of Diagnostic Trouble Code (DTC)

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

| DTC   | Detailed code           | Display  | Content of diagnosis                                  | Reference target   |
|-------|-------------------------|--|---|--|
| C0073 | 1C8XH<br>1CAXH          | Lateral G sensor offset is too big                         | Excessive amount of lateral G sensor output offset    | <Ref. to VDC(diag)-101, DTC C0073 EXCESSIVE AMOUNT OF LATERAL G SENSOR OUTPUT OFFSET, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>    |
|       | 1C0XH<br>1C6XH<br>1D8XH | Abnormal lateral G sensor output                           | Lateral G sensor output                               | <Ref. to VDC(diag)-101, DTC C0073 LATERAL G SENSOR OUTPUT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>                               |
|       | 1CCXH                   | Change range of lateral G sensor is too big                | Excessive variation amount of lateral G sensor output | <Ref. to VDC(diag)-101, DTC C0073 EXCESSIVE VARIATION AMOUNT OF LATERAL G SENSOR OUTPUT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
|       | 1D2XH                   | Excessive lateral G sensor signal                          | Excessive lateral G sensor output                     | <Ref. to VDC(diag)-102, DTC C0073 EXCESSIVE LATERAL G SENSOR OUTPUT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>                     |
|       | 1E0XH                   | Voltage inputted to lateral G sensor exceeds specification | Lateral G sensor power/output                         | <Ref. to VDC(diag)-104, DTC C0073 LATERAL G SENSOR POWER/OUTPUT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>                         |
| C0074 | 118XH                   | Pressure sensor test failure                               | Pressure sensor test malfunction                      | <Ref. to VDC(diag)-107, DTC C0074 PRESSURE SENSOR TEST MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>                      |
|       | 110XH                   | Pressure sensor offset is too big                          | Excessive pressure sensor output offset               | <Ref. to VDC(diag)-109, DTC C0074 EXCESSIVE PRESSURE SENSOR OUTPUT OFFSET, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>               |
|       | 120XH<br>113XH          | Pressure sensor power/output                               | Pressure sensor power/output                          | <Ref. to VDC(diag)-110, DTC C0074 PRESSURE SENSOR POWER/OUTPUT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>                          |
|       | 102XH<br>108XH          | Pressure sensor output                                     | Pressure sensor output                                | <Ref. to VDC(diag)-111, DTC C0074 PRESSURE SENSOR OUTPUT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>                                |
|       | 124XH                   | Pressure sensor power supply malfunction                   | Pressure sensor power supply malfunction              | <Ref. to VDC(diag)-113, DTC C0074 PRESSURE SENSOR POWER MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>                     |
| C0081 | 746XH                   | System malfunction   | System malfunction                                    | <Ref. to VDC(diag)-114, DTC C0081 SYSTEM MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>                                    |