


VDC OFF Switch

VEHICLE DYNAMICS CONTROL (VDC)

11. VDC OFF Switch

A: REMOVAL

- 1) Remove the instrument panel lower cover.
- 2) Remove the screws, and then remove the VDC OFF switch.

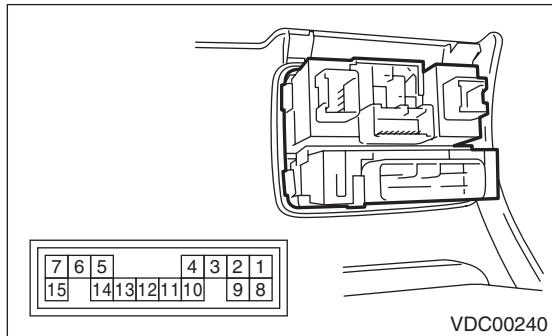

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the resistance between the VDC OFF switch terminals.

Switch position	Terminal No.	Standard
OFF	2 — 15	1 MΩ or more
ON	2 — 15	Less than 1 Ω

If NG, replace the VDC OFF switch.

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

VDC(diag)

	Page
1. Basic Diagnostic Procedure	2
2. Check List for Interview	4
3. General Description	9
4. Electrical Component Location	11
5. Control Module I/O Signal	13
6. Subaru Select Monitor	17
7. Read Diagnostic Trouble Code (DTC)	24
8. Inspection Mode	25
9. Clear Memory Mode	26
10. Warning Light Illumination Pattern	27
11. List of Diagnostic Trouble Code (DTC)	36
12. Diagnostic Procedure with Diagnostic Trouble Code (DTC)	42
13. General Diagnostic Table	115