

6. “T-type” Tire

A: NOTE

“T-type” tire for temporary use is equipped as a spare tire.

CAUTION:

- Do not drive at a speed greater than 100 km/h (62 MPH).
- For the model with tire pressure monitoring system, the indicator light may blink when running with the “T-type” tire.

B: REPLACEMENT

Refer to “Steel Wheels” for removal and installation procedures of the “T-type” tire. <Ref. to WT-6, REMOVAL, Steel Wheel.>

CAUTION:

The “T-type” tire is only for temporary use. Replace with a conventional tire as soon as possible.

C: INSPECTION

1) Check the tire air pressure.

Specifications:

420 kPa (4.2 kg/cm², 60 psi)

- 2) Take stones, glass, nails, etc. out of the tread groove.
- 3) Check the tires for deformation, cracks, partial wear, or wear.

CAUTION:

Replace the tire with a new part if defective.