


12. Front Sub Sensor

A: REMOVAL

- 1) Turn the ignition switch to OFF.
- 2) Disconnect the ground cable from battery and wait for at least 20 seconds before starting work.
- 3) Remove the front bumper face. <Ref. to EI-30, FRONT BUMPER FACE, REMOVAL, Front Bumper.>
- 4) Remove the bolt, and then detach the front sub sensor.

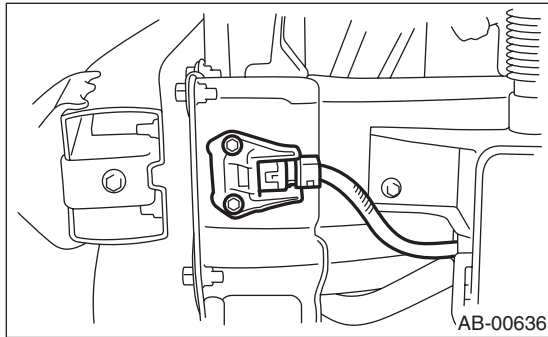

- 5) Disconnect the connector from front sub sensor.

B: INSTALLATION

CAUTION:

- Do not reuse the bolt and nut.
- Always use new bolts and nuts for them.

Install in the reverse order of removal.

Tightening torque:

13 N·m (1.32 kgf-m, 9.6 ft-lb)

C: INSPECTION

Check for the following, and replace the damaged parts with new parts.

- Front sub sensor, mounting bracket and connector are damaged.
- Airbag is deployed.

Front Sub Sensor

AIRBAG SYSTEM

AIRBAG SYSTEM (DIAGNOSTICS)

AB(diag)

	Page
1. Basic Diagnostic Procedure	2
2. Check List for Interview	3
3. General Description	4
4. Electrical Component Location	23
5. Airbag Connector	24
6. Airbag Control Module I/O Signal	27
7. Subaru Select Monitor	29
8. Read Diagnostic Trouble Code (DTC)	34
9. Inspection Mode	35
10. Clear Memory Mode	36
11. Airbag Warning Light Illumination Pattern	37
12. Airbag Warning Light Failure	38
13. List of Diagnostic Trouble Code (DTC)	43
14. Diagnostic Chart with Trouble Code	47