


Electrical Component Location

AIRBAG SYSTEM (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION

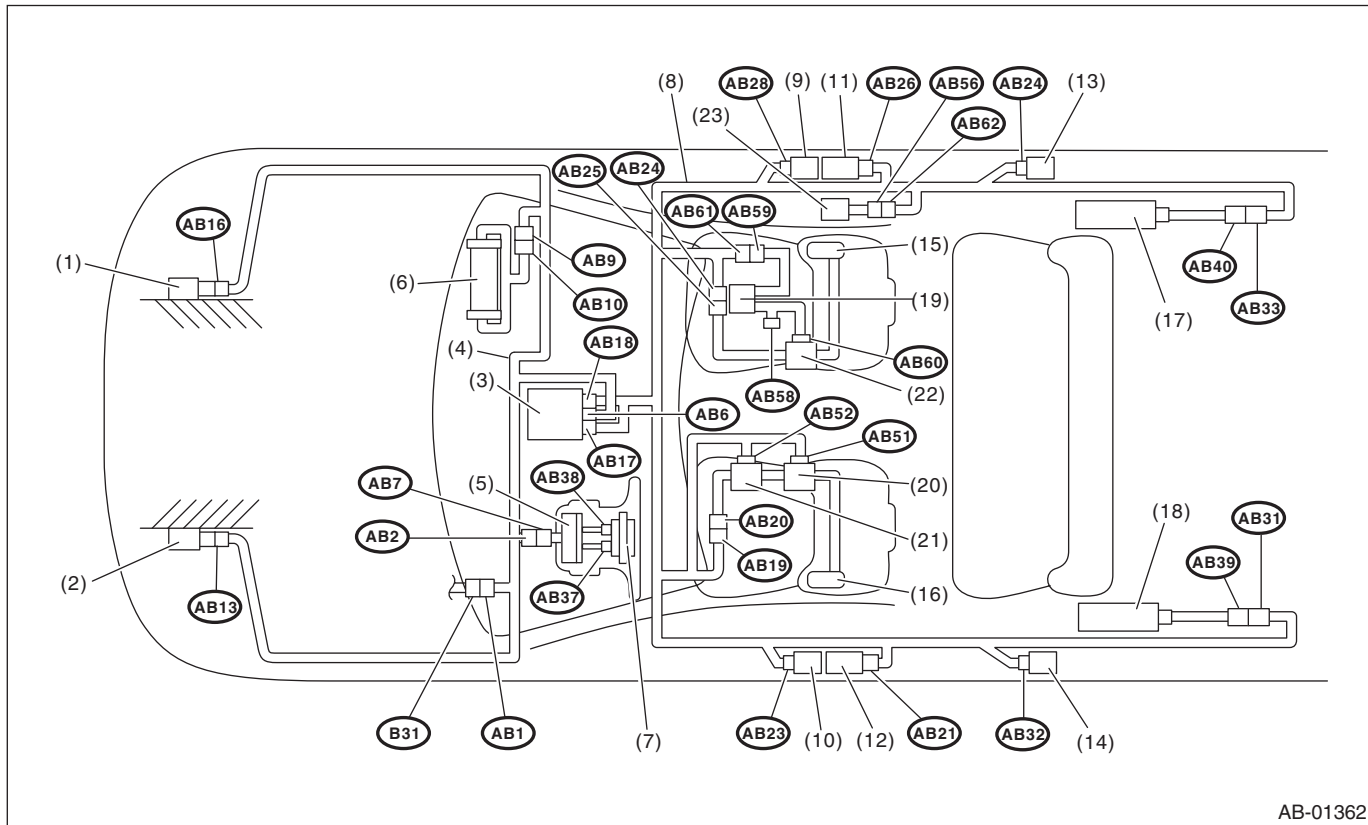

- | | | |
|--|----------------------------------|--|
| (1) Front sub sensor (RH) | (9) Side airbag sensor (RH) | (17) Curtain airbag inflator (RH) |
| (2) Front sub sensor (LH) | (10) Side airbag sensor (LH) | (18) Curtain airbag inflator (LH) |
| (3) Airbag control module with built-in safing and electric sensor | (11) Seat belt pretensioner (RH) | (19) Occupant detection control module |
| (4) Airbag main harness | (12) Seat belt pretensioner (LH) | (20) Buckle switch (LH) |
| (5) Roll connector | (13) Curtain airbag sensor (RH) | (21) Seat position sensor (LH) |
| (6) Passenger's airbag inflator | (14) Curtain airbag sensor (LH) | (22) Buckle switch (RH) |
| (7) Driver's airbag inflator | (15) Side airbag inflator (RH) | (23) Belt tension sensor |
| (8) Airbag rear harness | (16) Side airbag inflator (LH) | |

Connector No.	(AB1)	(AB2)	(AB6)	(AB7)	(AB9)	(AB10)	(AB13)	(AB16)	(AB17)	(AB18)	(AB19)	(AB20)
Pin	12	4	28	4	4	4	2	2	20	20	2	2
Color	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow
Male/Female	Female	Female	Female	Male	Female	Male	Female	Female	Female	Female	Female	Male
Connector No.	(AB21)	(AB23)	(AB24)	(AB25)	(AB26)	(AB28)	(AB31)	(AB32)	(AB33)	(AB34)	(AB37)	(AB38)
Pin	2	4	2	2	2	4	2	4	2	4	2	2
Color	Black	Yellow	Yellow	Yellow	Black	Yellow	Yellow	Yellow	Yellow	Yellow	Orange	Black
Male/Female	Female	Female	Female	Male	Female	Female	Female	Female	Female	Female	Female	Female
Connector No.	(AB39)	(AB40)	(AB51)	(AB52)	(AB56)	(AB58)	(AB59)	(AB60)	(AB61)	(AB62)		
Pin	2	2	2	2	3	3	6	2	6	3		
Color	Yellow	Yellow	Yellow	Yellow	Yellow	Gray	Gray	Yellow	Gray	Brown		
Male/Female	Male	Male	Female	Female	Male	Female	Male	Male	Female	Female		