

4. Horn Switch

A: REMOVAL

CAUTION:

Before servicing, be sure to read the notes in the AB section for proper handling of the driver's airbag module. <Ref. to AB-6, CAUTION, General Description.>

NOTE:

Horn switch is a unit with the driver's airbag module.


- 1) Disconnect the ground cable from battery.
- 2) Remove the driver's airbag module. <Ref. to AB-17, REMOVAL, Driver's Airbag Module.>

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the resistance between horn switch terminal and airbag module bracket.

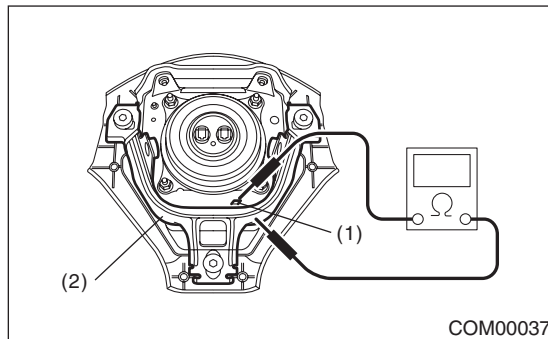

- (1) Airbag module bracket
(2) Horn switch terminal

Switch position	Terminal No.	Resistance
When horn switch is pushed.	Horn switch terminal and airbag module bracket	Less than 1 Ω
When horn switch is not pushed.		1 M Ω or more

Horn Switch

COMMUNICATION SYSTEM

GLASS/WINDOWS/MIRRORS

GW

	Page
1. General Description	2
2. Power Window System	8
3. Power Window Control Switch	9
4. Front Door Glass	12
5. Front Regulator and Motor Assembly	17
6. Remote Control Mirror System	18
7. Scalp Cap	19
8. Outer Mirror Assembly	20
9. Outer Mirror	22
10. Remote Control Mirror Switch	23
11. Rear Door Glass	24
12. Rear Regulator and Motor Assembly	26
13. Windshield Glass	27
14. Rear Gate Glass	30
15. Rear Window Glass	31
16. Rear Window Defogger System	32
17. Rear Window Defogger	33
18. Rear Quarter Glass	35
19. Sunroof Glass	36
20. Rearview Mirror	37
21. Wiper Deicer System	38
22. Wiper Deicer Switch	39