

## 2. Cruise Control Unit

### A: NOTE

The control of cruise control system is carried out in engine control module (ECM).

### B: REMOVAL

<Ref. to FU(H4SO)-36, REMOVAL, Engine Control Module (ECM).> <Ref. to FU(H4DOTC)-38, REMOVAL, Engine Control Module (ECM).> <Ref. to FU(H6DO)-33, REMOVAL, Engine Control Module (ECM).>

### C: INSTALLATION

<Ref. to FU(H4SO)-36, INSTALLATION, Engine Control Module (ECM).> <Ref. to FU(H4DOTC)-38, INSTALLATION, Engine Control Module (ECM).> <Ref. to FU(H6DO)-33, INSTALLATION, Engine Control Module (ECM).>