

# Inhibitor Switch

## CRUISE CONTROL SYSTEM

### 6. Inhibitor Switch

#### A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Disconnect the connector from inhibitor switch, then remove the switch. <Ref. to 4AT-47, REMOVAL, Inhibitor Switch.>

#### B: INSTALLATION

Install in the reverse order of removal.

#### C: INSPECTION

Measure the inhibitor switch resistance.

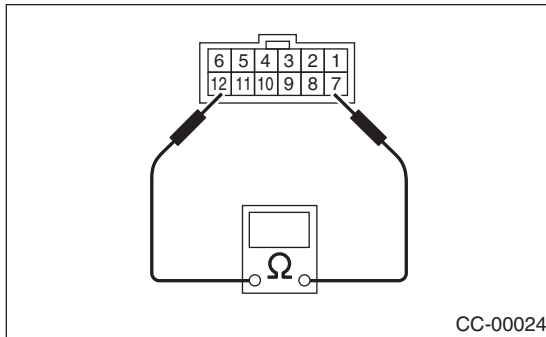

Select lever position	Terminal No.	Standard
P	7 and 12	Less than 1 Ω
N		Less than 1 Ω
Other than P or N		1 MΩ or more

If NG, replace the inhibitor switch.