

Antenna Amplifier


ENTERTAINMENT

12. Antenna Amplifier

A: REMOVAL


1. SEDAN MODEL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the rear quarter trim. <Ref. to EI-61, SEDAN MODEL, REMOVAL, Rear Quarter Trim.>
- 3) Disconnect the harness connectors and terminals.
- 4) Remove the curtain airbag module. <Ref. to AB-21, REMOVAL, Curtain Airbag Module.>
- 5) Remove the screws and detach the antenna amplifier.

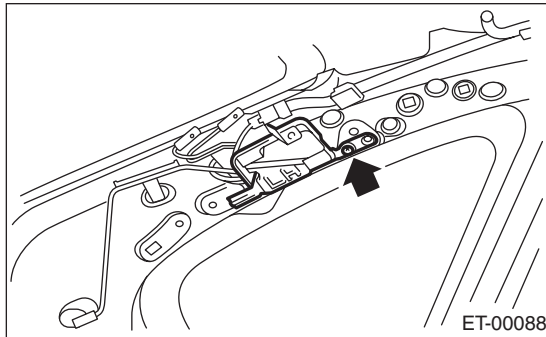

2. WAGON MODEL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the rear gate trim. <Ref. to EI-66, REMOVAL, Rear Gate Trim.>
- 3) Disconnect the harness connectors and terminals.
- 4) Remove the screws and detach the antenna amplifier.

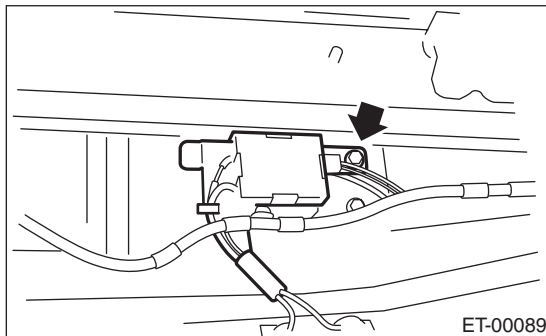


B: INSTALLATION

Install in the reverse order of removal.


C: INSPECTION

Measure the resistance of antenna amplifier.

- Sedan model

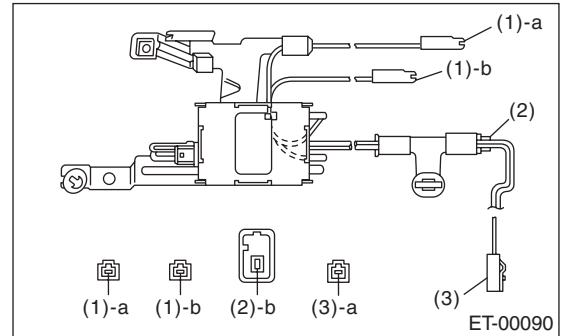

- Wagon model

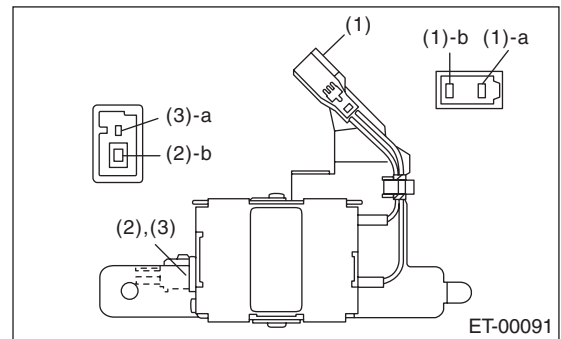

| Terminal No. | Standard |
|--------------------------|---------------|
| (1)-a and Amplifier body | 10 kΩ or more |
| (1)-b and Amplifier body | 10 kΩ or more |
| (2)-b and Amplifier body | 10 kΩ or more |
| (3)-a and Amplifier body | 10 kΩ or more |