
18.Rear Accessory Power Supply Socket

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the console box. <Ref. to EI-52, RE-MOVAL, Console Box.>
- 3) Disconnect the harness connector, and remove the accessory power supply socket.

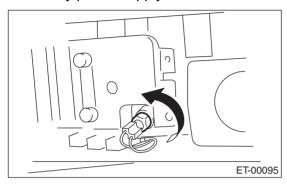

B: INSTALLATION

Install in the reverse order of removal.