

## 2. Audio System

### A: WIRING DIAGRAM

<Ref. to WI-136, WIRING DIAGRAM, Audio System.>

### B: INSPECTION

Symptom	Repair order
No power coming in. (No display and no sound from speakers)	<ol style="list-style-type: none"> <li>1. Check the fuse and power supply for audio.</li> <li>2. Check the audio ground.</li> <li>3. Remove the audio and repair them.</li> </ol>
A specific speaker does not operate.	<ol style="list-style-type: none"> <li>1. Check the speaker.</li> <li>2. Check the output circuit between audio and speaker.</li> </ol>
Audio generates noise with engine is running.	<ol style="list-style-type: none"> <li>1. Check the audio ground.</li> <li>2. Check the generator.</li> <li>3. Check the ignition coil.</li> <li>4. Remove the audio and repair them.</li> </ol>
Volume is low in AM and FM modes, or interference noise occurs.	<ol style="list-style-type: none"> <li>1. Check the antenna.</li> <li>2. Check the antenna amplifier.</li> <li>3. Check the noise suppressor.</li> <li>4. Check the audio ground.</li> <li>5. Remove the audio and repair them.</li> </ol>