


## 16. Roof Rail

### A: REMOVAL

- 1) Remove the roof trim. <Ref. to EI-65, REMOVAL, Roof Trim.>
- 2) Remove the six nuts.

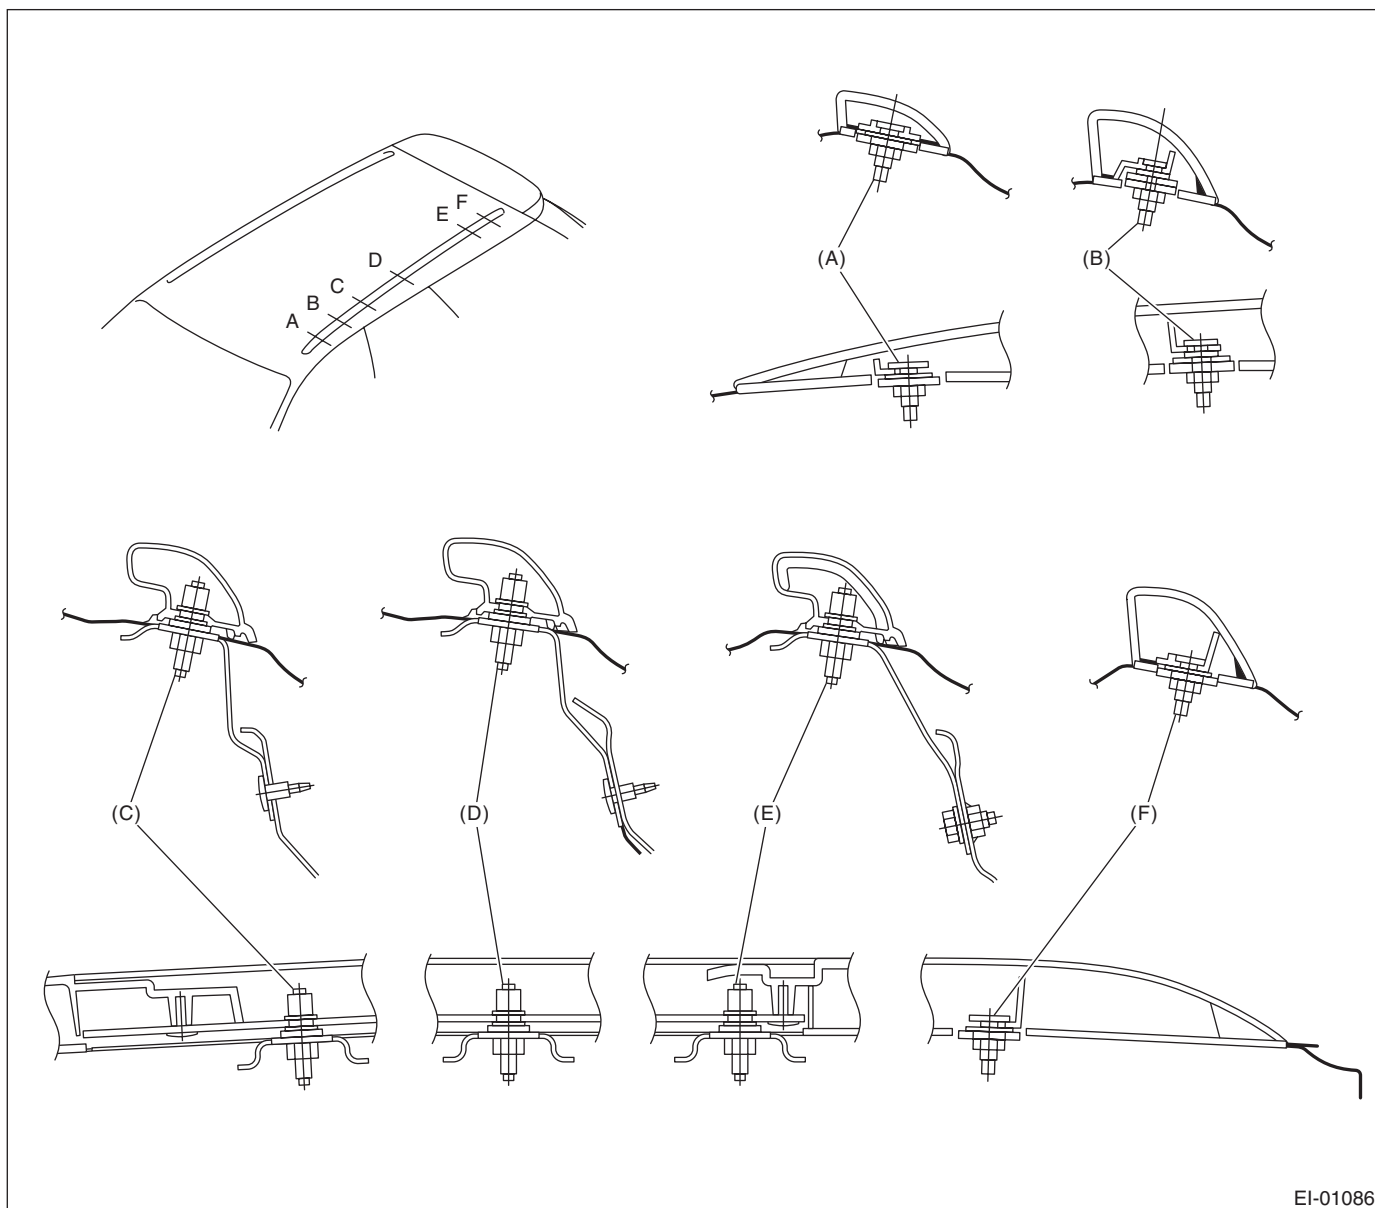

EI-01086

**NOTE:**

Perform the removal procedures by referring to above illustration. (OUTBACK model)

### B: INSTALLATION

Install in the reverse order of removal.

**CAUTION:**

When removing or installing the roof rail, be careful not to scratch the body panel with the stud bolt of roof rail.

**Tightening torque:**

7.5 N·m (0.77 kgf-m, 5.53 ft-lb)