


Front Grille

EXTERIOR/INTERIOR TRIM


2. Front Grille

A: REMOVAL

- 1) Open the front hood.
- 2) Remove push clips (A), front grille clips (B) and bolts (C) from each side of the front grille.

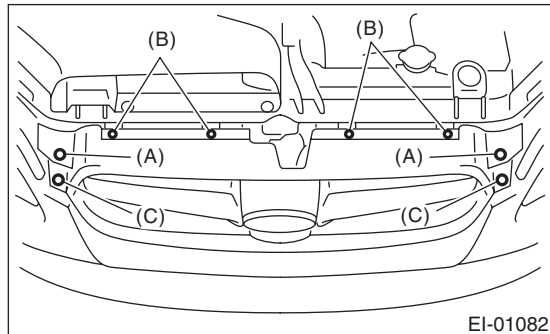

- 3) Pull the lower side of the front grille forward, remove hooks (A), and then remove the front grille from vehicle body.

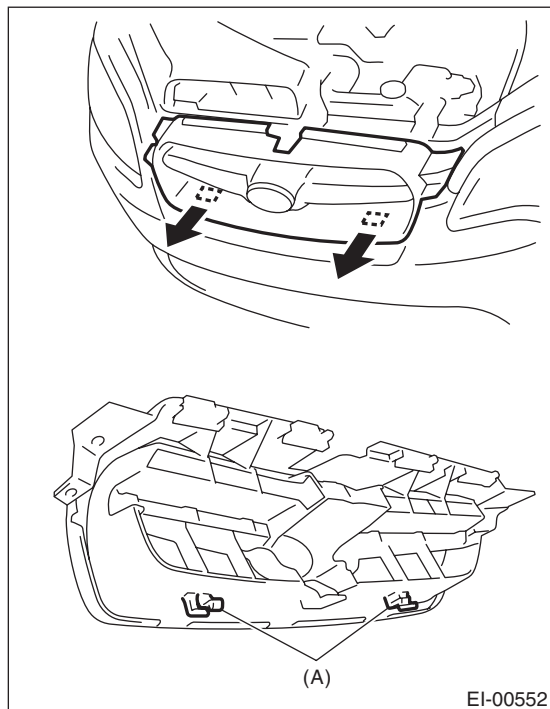

B: INSTALLATION

Install in the reverse order of removal.