


Upper Inner Trim

EXTERIOR/INTERIOR TRIM

24. Upper Inner Trim


A: REMOVAL

1) From the top side of the trim, remove the metal clip using a flat tip screwdriver.

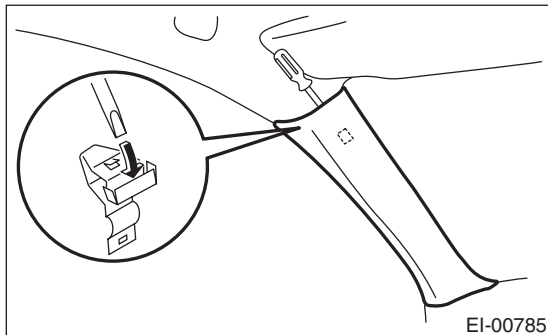


CAUTION:
When the metal clip comes off or becomes damaged, replace both trim and metal clips with new parts.

2) Remove the front pillar upper trim.

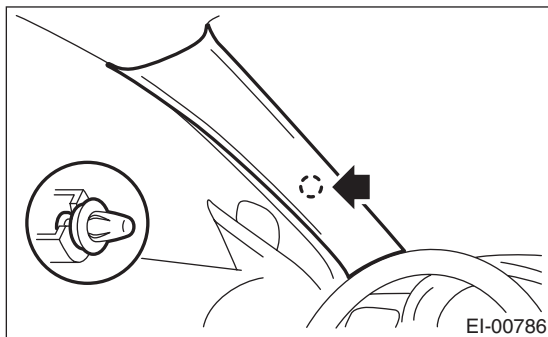


3) Remove the front inside scuff plate, rear inside scuff plate and center pillar lower trim. <Ref. to EI-59, REMOVAL, Lower Inner Trim.>

4) Remove the cap on the upper side of the pillar trim, and remove the bolt inside.

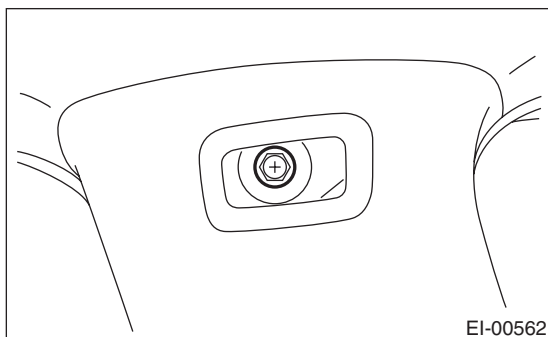

5) Remove the center pillar upper trim.

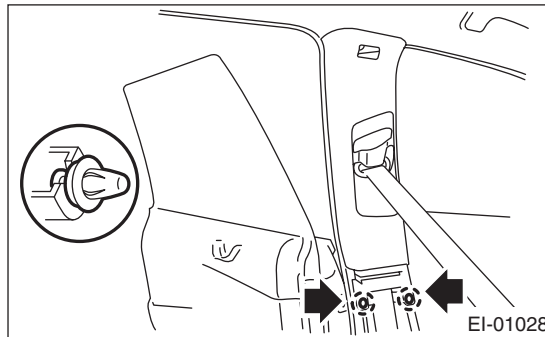

6) Remove the seat belt lower anchor bolt at the center pillar lower port. (Driver's seat)

7) Refer to the removal procedure of "Front Seat Belt" for the passenger's seat. <Ref. to SB-10, OUTER SEAT BELT ASSEMBLY, REMOVAL, Front Seat Belt.>

B: INSTALLATION

Install in the reverse order of removal.