

# Trunk Room Trim


EXTERIOR/INTERIOR TRIM

## 31. Trunk Room Trim


### A: REMOVAL

#### 1. TRUNK LID TRIM

1) Remove the trim clips and stopper rubber, and remove the trunk lid trim.

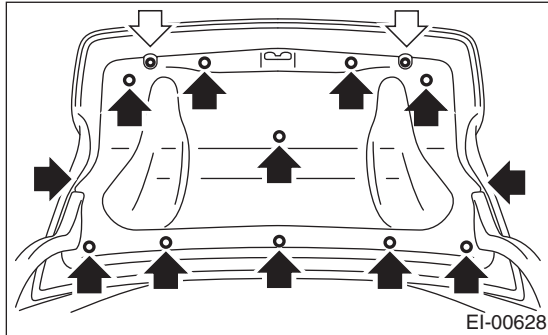


2) Remove the four claws, and remove the trunk handle cover (1).

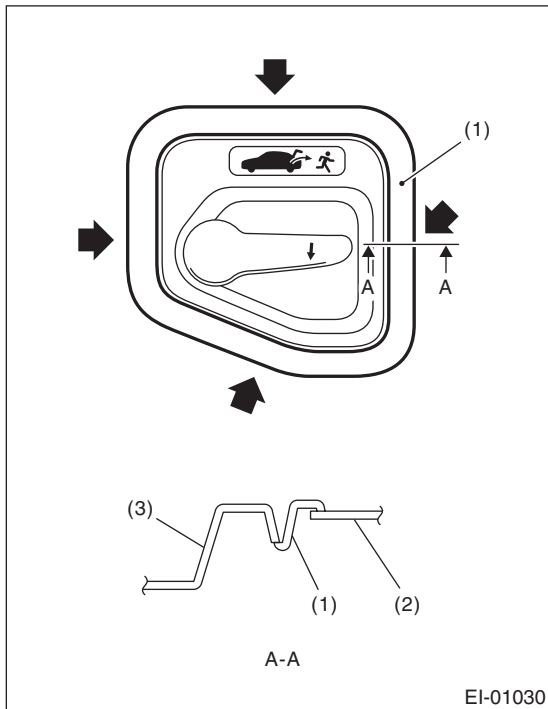


- (1) Trunk handle cover
- (2) Trunk lid trim
- (3) Trunk release handle

3) Remove clip (A) of the trunk side trim, and remove the trunk lid arm cover.

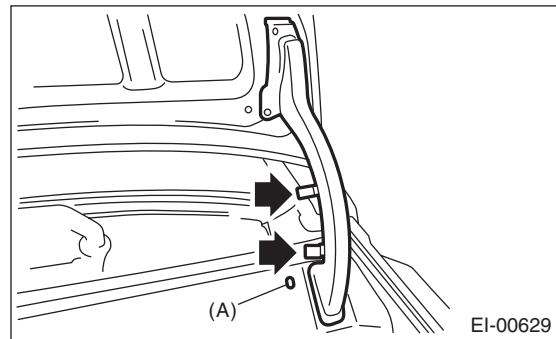


#### 2. TRUNK ROOM TRIM

1) Remove the trunk room mat.

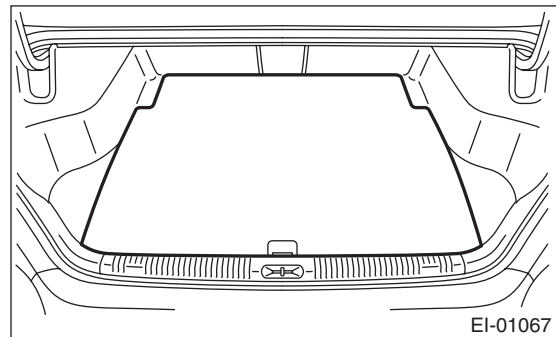


2) Remove the trim clips (A), and remove the trunk room end cover.

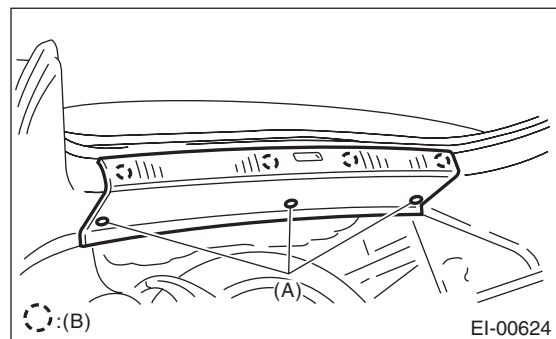


(B) Clip


3) Remove the rear seat backrest, and remove the trim clips at the front side of the trunk side trim.  
<Ref. to SE-17, (WAGON MODEL), REMOVAL, Rear Seat.>

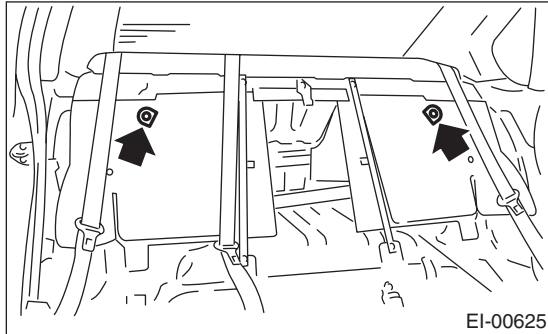

4) Insert the flat tip screwdriver from the lower side of the trunk hook, and then remove the trunk hook by rotating it 90°.

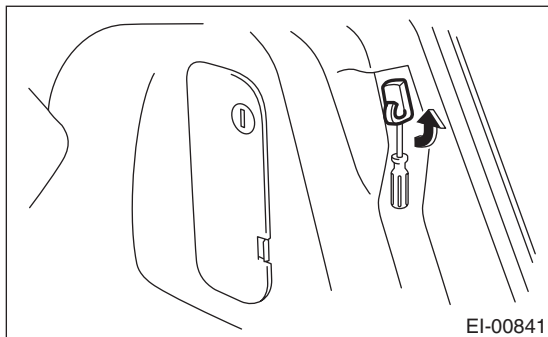

5) Remove the trim clips, and remove the trunk side trim.

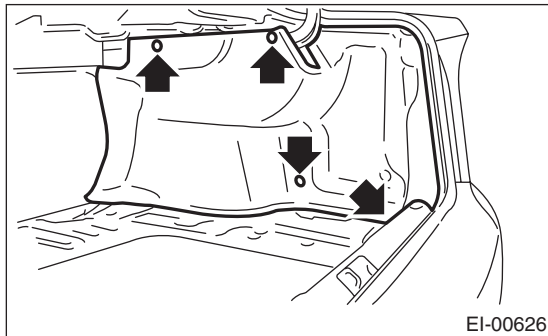

## **B: INSTALLATION**

Install in the reverse order of removal.