



34.Trunk Lid Garnish

A: REMOVAL


- 1) Remove the license plate, and loosen bolts (A).

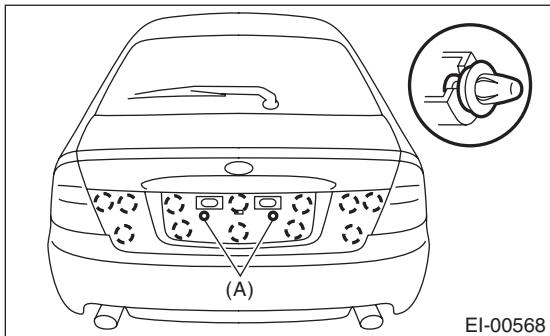

- 2) Remove the clip in the upper corner of the trunk lid garnish.

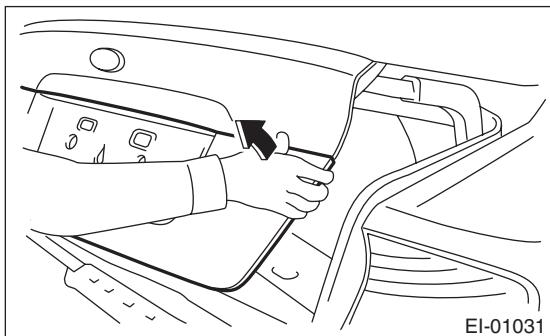

- 3) Place your hands between the trunk lid garnish and the trunk lid panel, and remove the trunk lid garnish starting from the edge, in order.

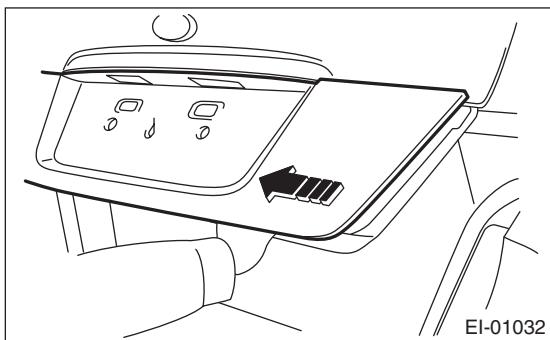

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.77 kgf·m, 5.53 ft-lb)