

5. Floor Under Protector


A: REMOVAL

1) Lift-up the vehicle.

NOTE:

A plate type lift cannot be used.

2) Remove the push turn clips (A) and bolts (B), and remove the floor under protector.

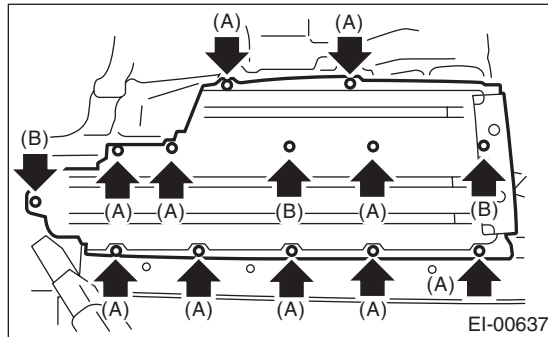

B: INSTALLATION

Install in the reverse order of removal.