


10. Remote Control Mirror Switch

A: REMOVAL

- 1) Remove the instrument panel lower cover. <Ref. to EI-50, REMOVAL, Instrument Panel Lower Cover.>
- 2) Disconnect the connector.

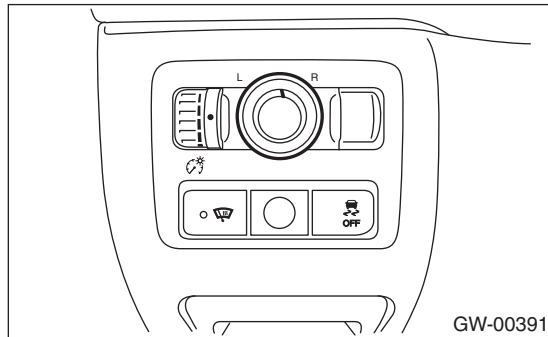

- 3) Remove the remote control mirror switch from instrument panel lower cover.


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1. REMOTE CONTROL MIRROR SWITCH

Move the remote control mirror switch to each position and check continuity between terminals.

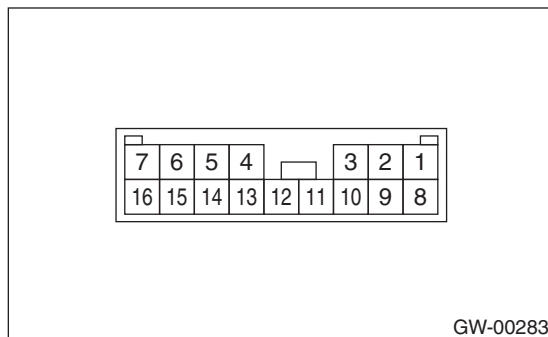

- Change over switch R

Switch position	Terminal No.	Standard
OFF	—	1 MΩ or more
UP	10 and 12, 15 and 14	Less than 1 Ω
DOWN	10 and 15, 12 and 14	Less than 1 Ω
LEFT	10 and 11, 15 and 14	Less than 1 Ω
RIGHT	10 and 15, 11 and 14	Less than 1 Ω

- Change over switch L

Switch position	Terminal No.	Standard
OFF	—	1 MΩ or more
UP	10 and 8, 15 and 14	Less than 1 Ω
DOWN	10 and 15, 8 and 14	Less than 1 Ω
LEFT	10 and 9, 15 and 14	Less than 1 Ω
RIGHT	10 and 15, 9 and 14	Less than 1 Ω

Replace the remote control mirror switch if defective.