


20. Rearview Mirror

A: REMOVAL

- 1) Remove the TORX[®] screw (1).
- 2) Slide the rearview mirror (2) to the upper side (A) of the windshield glass (3), and remove the rearview mirror from the button (4).

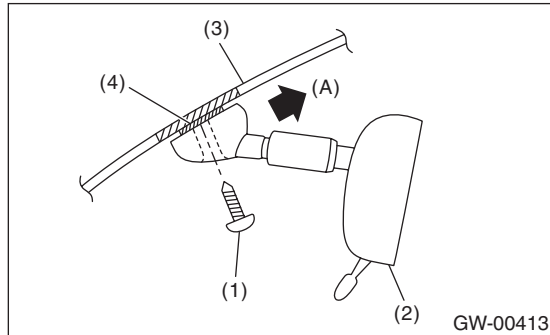

CAUTION:

- Be careful not to damage the mirror surface.
- Be careful not to damage the windshield glass.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to GW-6, MIRROR, COMPONENT, General Description.>

CAUTION:

When tightening the mounting TORX[®] screw, be sure to observe the tightening torque. Otherwise, the mount may be damaged in over-torque conditions.

C: INSPECTION

Check that the mirror is not damaged.
Check that the spring is not damaged.