

# Wiper Deicer System

GLASS/WINDOWS/MIRRORS

## 21. Wiper Deicer System

### A: WIRING DIAGRAM

<Ref. to WI-135, Wiper Deicer System.>

### B: INSPECTION

| Symptom                        | Repair order  |
|--------------------------------|---|
| Wiper deicer does not operate. | <ol style="list-style-type: none"><li>1. Fuse (F/B No. 4, 9)</li><li>2. Wiper deicer relay</li><li>3. Wiper deicer switch</li><li>4. Wiring harness</li><li>5. Body integrated unit</li></ol> |

Refer to “Rear Window Defogger” for inspection.

<Ref. to GW-33, INSPECTION, Rear Window Defogger.>

#### NOTE:

Wiper deicer system can be customized on the Subaru Select Monitor.

| System name        | Initial setting   | Customize setting     |
|--------------------|-------------------|-----------------------|
| Wiper deicer timer | OFF after 15 min. | Continuous operation* |

\*: When one of the following conditions occurs, continuous operation is suspended and turned off after 15 min.

- Ambient temperature at 5°C (41°F) or more continues for 10 sec.
- Malfunction occurs on ambient sensor.
- Vehicle speed below 15 km/h (9 MPH) continues 15 min.
- Malfunction occurs in CAN communication.

### C: REPAIR

Refer to “Rear Window Defogger” for repair.

<Ref. to GW-34, REPAIR, Rear Window Defogger.>