


Blower Resistor (Manual A/C Model)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

10. Blower Resistor (Manual A/C Model)

A: REMOVAL


- 1) Remove the glove box lower cover on passenger side. <Ref. to EI-51, REMOVAL, Glove Box.>
- 2) Disconnect the blower resistor connector.
- 3) Remove the two screws and remove the blower resistor.

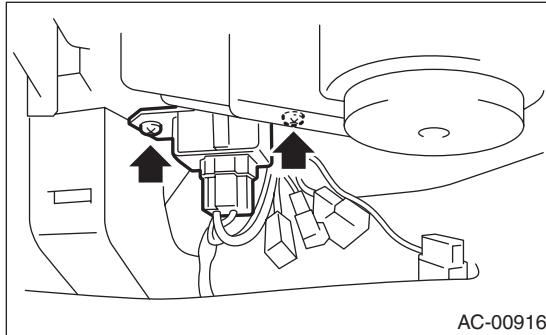

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

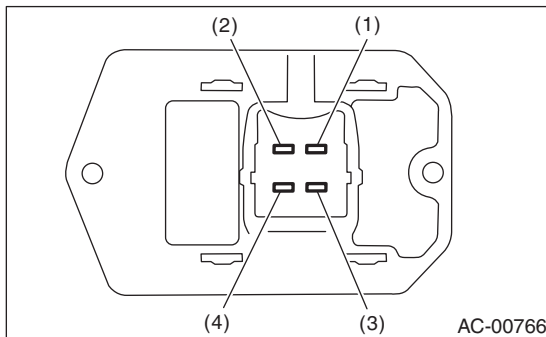

Measure the blower resistor resistance.

Terminal No.	Standard
4 and 2	Approx. 0.44 Ω
4 and 3	Approx. 1.12 Ω
4 and 1	Approx. 2.92 Ω

If NG, replace the blower resistor.