



11. Heater Core

A: REMOVAL

- 1) Remove the heater and cooling unit. <Ref. to AC-36, REMOVAL, Heater and Cooling Unit.>
- 2) Remove the screws and remove the heater core cover and pipe clamp.

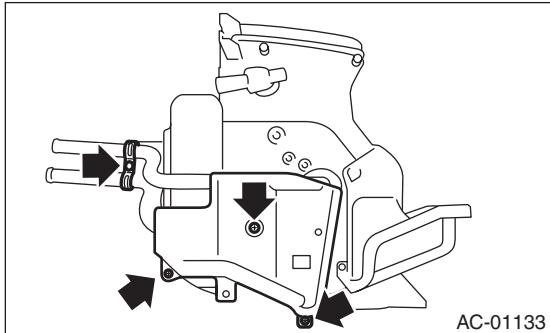

- 3) Remove the heater core (A).

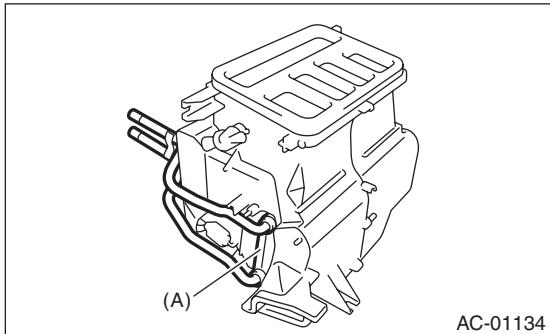

B: INSTALLATION

Install in the reverse order of removal.