## 2. Refrigerant Pressure with Manifold Gauge Set

## A: PROCEDURE

- 1) Place the vehicle in the shade and windless condition.
- 2) Connect the manifold gauge set.
- 3) Open the front windows and close all doors.
- 4) Open the front hood.
- 5) Increase the engine to 1,500 rpm.
- 6) Turn on the A/C switch.
- 7) Turn the temperature control switch to MAX COOL.
- 8) Put in RECIRC position.
- 9) Turn the blower control switch to HI.
- 10) Read the gauge.

## Standard:

Low pressure:  $127 - 196 \text{ kPa} (1.3 - 2.0 \text{ kg/cm}^2, 18 - 28 \text{ psi})$ High pressure:  $1,471 - 1,667 \text{ kPa} (15 - 17 \text{ kg/cm}^2, 213 - 242 \text{ psi})$ 

Ambient temperature: 30 — 35°C (86 — 95°F)

## **B: INSPECTION**

Symptom	Probable cause	Repair order
High-pressure side is unusually high.	<ul> <li>Defective condenser fan motor</li> <li>Clogged condenser fin</li> <li>Too much refrigerant</li> <li>Air inside the system</li> <li>Defective receiver dryer</li> </ul>	<ul> <li>Replace the fan motor.</li> <li>Clean the condenser fin.</li> <li>Discharge refrigerant.</li> <li>Replace the receiver dryer.</li> <li>After evacuating again, charge an appropriate amount of refrigerant.</li> </ul>
High-pressure side is unusually low.	<ul> <li>Defective compressor</li> <li>Not enough refrigerant</li> <li>Clogged expansion valve</li> <li>Expansion valve frozen temporarily by moisture.</li> </ul>	<ul> <li>Replace the compressor.</li> <li>Check for leaks.</li> <li>Replace the expansion valve.</li> <li>Fully evacuate the expansion valve.</li> </ul>
Low-pressure side is unusually high.	<ul><li>Defective compressor</li><li>Defective expansion valve</li><li>Too much refrigerant</li></ul>	<ul><li>Replace the compressor.</li><li>Replace the expansion valve.</li><li>Discharge refrigerant.</li></ul>
Low-pressure side is unusually low.	<ul> <li>Not enough refrigerant</li> <li>Clogged expansion valve</li> <li>Expansion valve frozen temporarily by moisture.</li> <li>Saturated receiver dryer</li> </ul>	<ul> <li>Check for leaks.</li> <li>Replace the expansion valve.</li> <li>Replace the receiver dryer.</li> </ul>