

In-vehicle Sensor (Auto A/C Model)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

25. In-vehicle Sensor (Auto A/C Model)

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the console side panel of the driver's side. <Ref. to EI-53, REMOVAL, Center Console.>
- 3) Disconnect the connector and aspirator hose, remove the claw and remove the in-vehicle sensor from the center console frame.

CAUTION:

Be careful not to damage the sensors and interior trims when removing.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

<Ref. to AC(diag)-31, IN-VEHICLE SENSOR, Diagnostic Procedure for Sensors.>