


# Blower Motor Unit Assembly

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

## 7. Blower Motor Unit Assembly

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the glove box. <Ref. to EI-51, REMOVAL, Glove Box.>
- 3) Disconnect the connectors of the A/C control module, intake door actuator, blower motor, power transistor and blower resistor.
- 4) Loosen the bolt and nut to remove blower motor unit assembly.

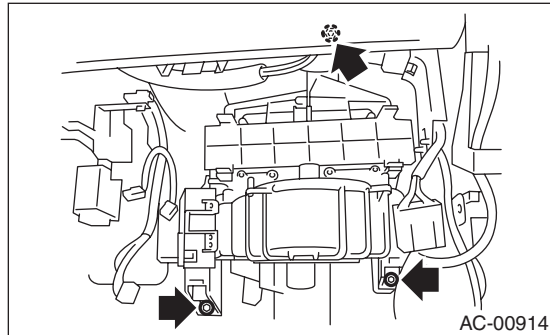

### B: INSTALLATION

Install in the reverse order of removal.

#### **Tightening torque:**

**Refer to “COMPONENT” of “General Description”.** <Ref. to AC-5, HEATER COOLING UNIT, COMPONENT, General Description.>  
<Ref. to AC-8, BLOWER MOTOR UNIT, COMPONENT, General Description.>